



Tower Speaker
ZEB GIGA



User Manual

www.zebronics.com

Thank you for purchasing the **“ZEB-GIGA”** Tower Speaker . Please read this user manual carefully before usage & save it for future reference.

Note:

- *Avoid the use of this product at the high- temperature and high humidity environment.*
- *Avoid the self-disassembly of the product or it results in the failure of warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.1 | USB | FM | AUX | MIC Input
- LED display
- 20.32 cm Subwoofer
- Remote control
- Karaoke
- 6.3mm Microphone Input
- Integrated Media Control

Specifications:

Output Power (RMS) : 160W

Driver Size

Subwoofer : 20.32 cm

Mid Range : 10.16 cm x 2

 
Impedance	
Subwoofer	: 8Ω
Mid Range	: 4Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: ≥75dB
Separation	: ≥45db
File Format Support	: MP3 (USB)
Line Input	: 2ch RCA
Max Supported	
USB Memory Size	: 32GB
FM Frequency	
Scan Range	: 88MHz - 108MHz
BT Name	: ZEB-GIGA
BT Version	: v5.1
Product Dimension	: 16.7 x 31.5 x 83 cm
	(W x D x H)
Net. Weight	: 11.76kg

Package Contents:

Speaker	: 1 U
Remote	: 1 U
Wireless Microphone	: 1 U
Input Cable	: 1 U
QR Code Guide	: 1 U


Product Description:

Control Panel

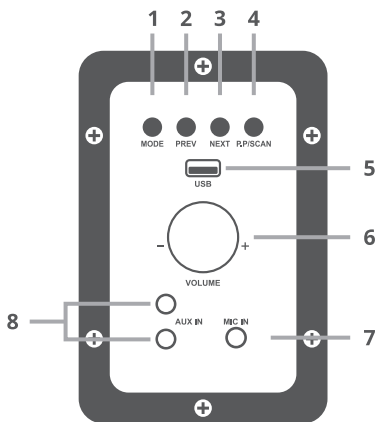


1. Mode Button
2. Previous Button
3. Next Button
4. Play-Pause / Scan Button
5. USB Port
6. Volume Increase / Decrease Knob
7. Mic IN
8. AUX IN

 Back Panel

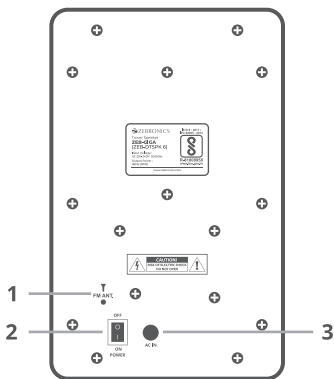

1. FM Antenna
2. Power On / Off Switch
3. AC Input

 Remote Control:

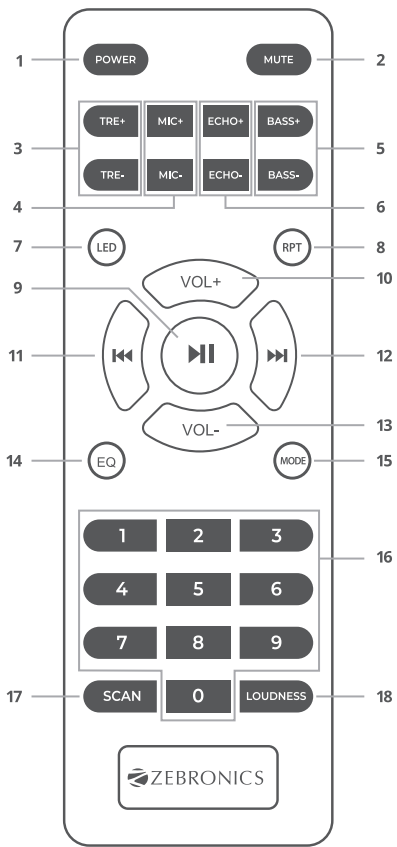

1. Power On-Off
2. Mute / Unmute
3. Treble volume + / -
4. Mic Volume + / -
5. Bass Volume + / -
6. Echo Volume + / -
7. LED Control
8. Press to Repeat One, FOD, RDO & All
9. Play / Pause
10. Volume +
11. Single Press for Previous Track / Long Press for Rewind
12. Single Press for Next Track / Long Press for Fast Forward
13. Volume -
14. Single Press to Change EQ Mode (POP, ROC, JAZ, CLA, CUT)
15. Single Press to Change Modes (BT, AUX, FM, USB)
16. Numeric Selection Keys (0-9)
17. Single Press to Scan FM Channels
18. Single Press for LD - On/Off

Instructions for Use:

Button functions

- Short Press the "**Mode**" button to change the input mode (BT/AUX/USB/FM).
- Short press the "**Next**" button to Next track / Station in BT/USB/FM mode.
- Short press the "**Prev**" button to Previous track / Station in BT/USB/FM mode.
- Short press the "**Play/Pause**" button to Play/Pause/Mute the track in (BT, USB, FM).
- Long press the "**Scan**" button to auto scan the nearby available FM channels.

General Instructions:

BT Mode:

- Power ON the speaker, press "**Mode**" button to switch to BT Mode. Switch ON BT on your audio source device and search for nearby BT devices, Find the name "**ZEB-GIGA**" tap on it and select pair. Media controls are mentioned in the above button functions.

USB Mode:

- The speaker automatically switches to USB mode when a USB drive is inserted. Media controls are mentioned in the above button function.

FM Radio:

- Long press the **Play/Pause** button on the control panel or **Scan** button on the remote to initiate auto scan function. Once the scanning is done, the detected channels will begin to play. Use **Previous/Next** button on the control panel or remote to change the channels.

AUX-IN:

- The speaker can be connected to any external audio player using the provided RCA to 3.5mm cable. Connect the red & white RCA cable to the speaker's AUX input and connect the other end to any audio source with 3.5mm AUX output.

Instructions for Mic Settings & Repeat

Mic Priority

- To turn On / Off Mic Priority Long press **Play/Pause** button on remote or speaker.

nS Mode

- On karaoke to Adjust Background music Volume Long press **EQ** Button to enter nS mode, then Adjust the Background music volume from 0 - 16.

RPT

- Single press RPT Button on Remote for Repeat function to work. Upon first press **ONE mode** is activated, this mode repeats a single track in loop.
- Upon Next press **FOD mode** is activated, this mode repeats all tracks on this folder in loop.
- Upon Next press **RDO mode** is activated, this mode shuffles all tracks in all folders.
- Upon Next press **ALL mode** is activated, this mode repeats all tracks in order.

