



Tower Speaker  
**ZEB****HYPER**



# User Manual

[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **“ZEB-HYPER”** Tower Speaker . Please read this user manual carefully before usage & save it for future reference.

**Note:**

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembly of the product or it results in the failure of warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

***<https://zebronics.com/pages/warranty-policy>***

**Features:**

- BT v5.1 | USB | FM | AUX | MIC Input
- LED Display
- 20.32 cm Subwoofer
- Remote Control
- Karaoke
- UHF Wireless Mic
- Integrated Media Control

**Specifications:**

Output Power (RMS) : 240W

 
Driver Size	
Subwoofer	: 20.32 cm x 2
Full Range	: 10.16 cm x 2
Impedance	
Subwoofer	: 8Ω
Full Range	: 4Ω
Frequency Response	: 20Hz-20kHz
S/N Ratio	: ≥70dB
Separation	: ≥45dB
File Format Support	: MP3 (USB)
Line Input	: 2ch RCA
Max Supported	
USB Memory Size	: 32GB
FM Frequency	
Scan Range	: 88MHz - 108 MHz
BT Name	: ZEB-HYPER
BT version	: v5.1
Product Dimension	
(W x D x H)	: 30 x 29.6 x 90.4 cm
Net. Weight	: 17.32kg

### **Package Contents:**

Speaker	: 1 U
Remote	: 1 U
Wireless Microphone	: 1 U
Input cable	: 1 U
QR Code Guide	: 1 U

**Product Description:**


**Control Panel**

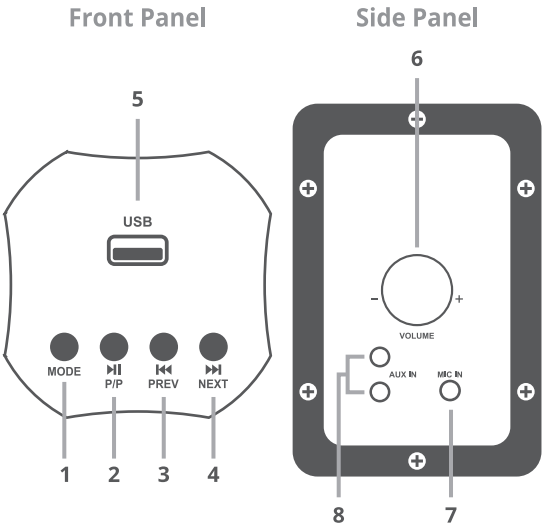

- 1. Mode Button
- 2. Play-Pause / MIC Priority / FM Scan
- 3. Previous Track / Channel
- 4. Next Track / Channel
- 5. USB Port
- 6. Volume Increase / Decrease Knob
- 7. MIC IN
- 8. AUX IN




# Back Panel

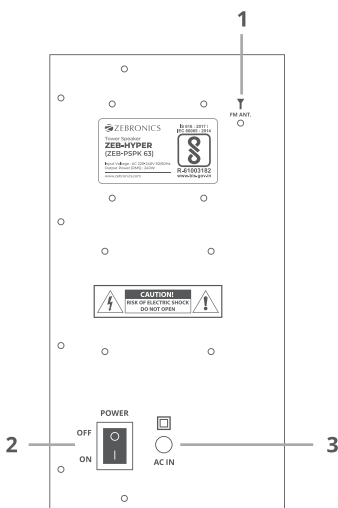 

1. FM Antenna
2. Power On / Off Switch
3. AC Input

# Remote Control:

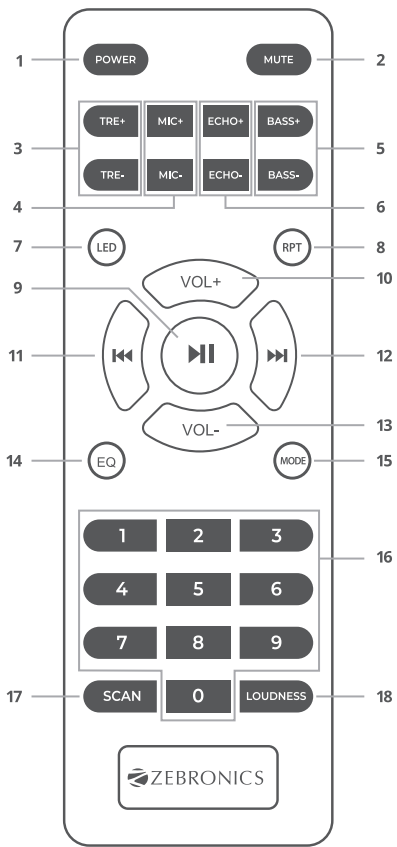 

1. Power On-Off
2. Mute / Unmute
3. Treble volume + / -
4. Mic Volume + / -
5. Bass Volume + / -
6. Echo Volume + / -
7. LED Control
8. Press to Repeat One, FOD, RDO & All
9. Play / Pause
10. Volume +
11. Single Press for Previous Track / Long Press for Rewind
12. Single Press for Next Track / Long Press for Fast Forward
13. Volume -
14. Single Press to Change EQ Mode (POP, ROC, JAZ, CLA, CUT)
15. Single Press to Change Modes (BT, AUX, FM, USB)
16. Numeric Selection Keys (0-9)
17. Single Press to Scan FM Channels
18. Single Press for LD - On/Off

## Instructions for Use:

### Button functions

- Short Press the **"Mode"** button to change the input mode (BT/AUX/USB/FM).
- Short press the **"Next"** button to Next track / Station in BT/USB/FM mode.
- Short press the **"Prev"** button to Previous track/Station in BT/USB/FM mode.
- Short press the **"Play/Pause"** button to Play/Pause/Mute the track in (BT, USB, FM).
- Long press the **"Play/Pause"** button to auto scan the nearby available FM channels.

## General Instructions:

### BT Mode:

- Power ON the speaker, press **"Mode"** button to switch to BT Mode. Switch ON BT on your audio source device and search for nearby BT devices, Find the name **"ZEB-HYPER"** tap on it and select pair. Media controls are mentioned in the above button functions.

### USB Mode:

- The speaker automatically switches to USB mode when a USB drive is inserted. Media controls are mentioned in the above button function.

## **FM Radio:**

- Long press the **Play/Pause** button on the control panel or **Scan** button on the remote to initiate auto scan function. Once the scanning is done, the detected channels will begin to play. Use **Previous/Next** button on the control panel or remote to change the channels.

## **AUX-IN:**

- The speaker can be connected to any external audio player using the provided RCA to 3.5mm cable. Connect the red & white RCA cable to the speaker's AUX input and connect the other end to any audio source with 3.5mm AUX output.

## **Instructions for Mic Settings & Repeat**

### **Mic Priority**

- To turn On / Off Mic Priority Long press **Play/Pause** button on remote or speaker.

## **nS Mode**

- On karaoke to Adjust Background music Volume Long press **EQ** Button to enter nS mode, then Adjust the Background music volume from 0 - 16.

## RPT

- Single press RPT Button on Remote for Repeat function to work. Upon first press **ONE mode** is activated, this mode repeats a single track in loop.
- Upon Next press **FOD mode** is activated, this mode repeats all tracks on this folder in loop.
- Upon Next press **RDO mode** is activated, this mode shuffles all tracks in all folders.
- Upon Next press **ALL mode** is activated, this mode repeats all tracks in order.

