



Tower Speaker
IMPACT



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-IMPACT** Tower Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- Avoid the usage of this speaker at the high temperature and high humidity environment.
- Avoid the self-disassembly of the product as it results in the failure of Warranty.

Features

Wireless BT/USB/ FM /AUX/MIC Input

LED Display

13.33cm subwoofer

Remote control

Karaoke

Wired Mic

Bass, Treble & Volume Control Knob

Specifications

Output power (RMS) : 50W

Driver size

Full range : 7.62cm x2

Subwoofer : 13.33cm

Impedance

Full range : 4Ω

Subwoofer : 8Ω

Frequency response : 40Hz- 20kHz

S/N Ratio : ≥70dB

Separation : ≥75dB

File format

support (USB) : MP3

Line input : 2ch RCA

Max. supported

memory size (USB) : 32GB

FM frequency range : 87.5MHz - 108MHz

BT name : ZEB-IMPACT

BT version : 4.2

Product dimension (W x D x H)

Subwoofer : 150 x 255 x 675 mm

Net. weight

Total : 5.5 Kg

Package Content

Speaker : 1 U


Remote : 1 U

Input cable : 1 U

Wired Microphone : 1 U


QR Code Guide : 1 U

Control Description

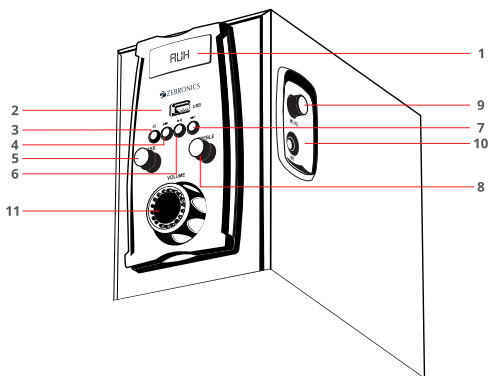

1. LED DISPLAY
2. USB PORT
3. MODE (BT/FM/USB/AUX)
4. PREVIOUS TRACK / FM CHANNEL -
5. BASS KNOB
6. PLAY / PAUSE / SCAN (FM MODE)
7. NEXT TRACK / FM CHANNEL +
8. TREBLE KNOB
9. MIC VOLUME CONTROL
10. MIC INPUT

Remote Control

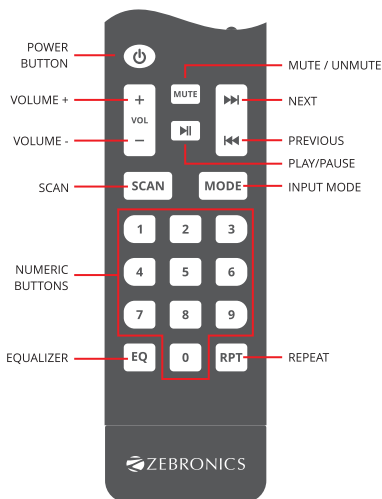

Power : standby ON/OFF

Numeric Pad(0-9) : To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+ : To increase the volume

Prev : To select the previous tracks in BT/USB or to Tune in FM mode

Vol- : To decrease the volume

RPT : To Switch between available repeat modes

Scan : To scan all FM channels available

Mode : Mode Selection (BT/AUX/USB/FM)

EQ : Short press to control BASS and short Press again to control TREBLE. Long Press to use Equalizer

Play/Pause To Play / Pause the current track. To switch next channel in FM mode

Next : To select the next tracks in BT/USB or to Tune in FM mode

Mute To Mute / Unmute

Instructions for Use:

Button functions

1. Press the **"Input"** button to change the input mode (BT/USB/FM/AUX) of the speaker.
2. Short press the **"Next/Prev"** button to change the Prev/ Next track or channel when in BT/USB mode or FM mode respectively.
3. Long press the **"Next/Prev"** button to increase/decrease the speaker volume.
4. Short press the **"PLAY"** button to Play/Pause the track being played or Mute/Unmute when in BT/USB mode or FM/AUX mode respectively.
5. Press and Hold the **"PLAY"** button to Scan for the available FM channels.

General Instructions

BT Mode:

Switch the source to BT mode, scan for nearby BT devices on your device. Tap on **"ZEB- IMPACT"** to connect.

USB Mode:

Insert the USB drive to the slot provided on the sub woofer. It will detect the USB and the audio files from drive will be played automatically.

FM radio:

Switch the source to FM mode. Press the **SCAN** button in the remote to scan for the available FM channels. On the Subwoofer press **Play/Pause** button to scan for the available FM channels .Once the scanning is done, the first scanned channel will begin to play. The next button or previous button in the remote/subwoofer can be used to change the FM channels.

AUX-IN:

The device can be connected to an audio device using an RCA to 3.5mm cable. Connect the one end of the cable to the speaker and the other end to an audio source. The songs from the audio source can be heard through the speaker.

