

# Tower Speaker LEGEND



**User Manual** 

www.zebronics.com

Thank you for purchasing the **ZEB-LEGEND PLUS** Tower Speaker. Please read the user manual carefully before usage & save it for future reference.

#### Note:

- Avoid the usage of this product at the high temperature and high humidity environment.
- Avoid self-disassembly of the product, it results in voiding the product's warranty.
- Turn off the speaker when it is not in use.

To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

#### **Features**

BT v5.0 / USB / FM / AUX / MIC Input LED Display 13.33cm Subwoofer Remote Control Karaoke 6.3mm Microphone Input Bass & Volume Control Knob

## **Specifications**

Output power (RMS) : 80W

**Driver Size** 

Subwoofer : 13.335 cm Mid Range : 10.16 cm x 2

**Impedance** 

Subwoofer :  $8\Omega$  Mid Range :  $4\Omega$ 

Frequency Response: 20Hz-20KHz S/N Ratio : > 60dB

: ≥ 45dB Separation

File Format Support : MP3 (USB) Line input : 2ch RCA

Max. Supported

Memory Size : 32GB (USB)

FM frequency range : 88 MHz - 108 MHz

: ZEB-LEGEND PLUS BT name : v5.0 BT version

Product Dimension : 15 x 24 x 66.4 cm

 $(W \times D \times H)$ : 6.1 kg

## **Package Content**

Net. Weight


Speaker :1U

Remote : 1 U

: 1m x 1 U Input Cable


Wired Microphone : 1 U OR Code Guide : 1 U

## **Control Panel Description**

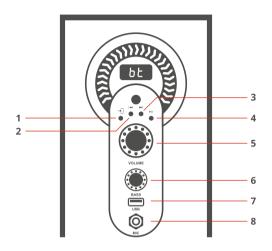


- 1. Mode/Standby
- 2. Volume Decrease / Previous Track
- 3. Volume Increase / Next Track
- 4. Play/Pause / Auto FM Scan
- 5. Master Volume
- 6. Bass Control Knob
- 7. USB input
- 8. Microphone Input

# **Back Panel Description**

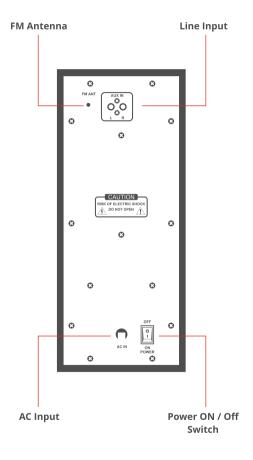

#### Remote Control

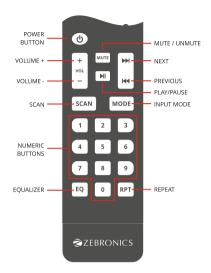

Power: standby ON/OFF

**Numeric Pad( 0-9) :** To select particular track from USB drive directly or to enter FM Channel frequency directly

Vol+: To increase the volume

**Prev :** To select the previous tracks in BT/USB or to Tune

in FM mode

Vol-: To decrease the volume

RPT: To Switch between available repeat modes

**Scan:** To scan all FM channels available **Mode:** Mode Selection (BT/AUX/USB/FM)

**EQ:** Short press to control BASS and short Press again to

control TREBLE. Long Press to use Equalizer

**Play/Pause** To Play/Pause the current track. To switch

next channel in FM mode

**Next :** To select the next tracks in BT/USB or to Tune in

FM mode

Mute To Mute / Unmute

## **Instructions for Use:**

#### **Button Functions:**

- Short press the "**Mode**" button to change the input mode (BT/AUX/USB/FM).
- Short press the ▶I button Next track / station in (BT, USB, FM).
- Short press the I◀ button Previous track/station in (BT, USB/FM).
- Long press the **▶I** or **I** ★ button Increase / decrease volume.
- Short press the ►II button Play / Pause / Mute the track in (BT, USB, FM).
- Long press the **II** button to auto scan the nearby available FM channels.
- Long press the "Mode" button Standby / Power On.

## **General Instructions:**

## **Bluetooth Mode:**

- Turn ON BT on your audio source device and search for nearby BT devices
- Find the name **"ZEB-LEGEND PLUS"** tap on it and select pair.
- Media controls are mentioned in the above button functions.

### **USB Mode:**

- The speaker automatically switches to USB mode when a USB drive is inserted.
- Media controls are mentioned in the above button functions.

**Note:** This mode is disabled if the USB drive is not connected. The speaker supports only MP3 audio files.

#### **FM Radio:**

- Long press the ►II button on the control panel or "Scan" button on the remote to initiate auto scan function.
- Once the scanning is done, the detected channels will begin to play.
- Use I◀ / ▶I button on the control panel or remote to change the channels.

#### **AUX-IN:**

- The speaker can be connected to any external audio player using the provided RCA to 3.5mm cable.
- Connect the red & white RCA cable to the speaker's aux input and connect the other end to any audio source with 3.5mm aux output.

## Instructions for Mic Settings:

- Single press the EQ button on the remote to control the Mic settings.
- The following will appear on the LED display. EH = Mic Echo, nC = Mic Volume.
- Now press "Vol+" or "Vol-" button on remote control to increase / decrease the values.

ISO 9001:2015 Certified Company www.zebronics.com