



Tower Speaker
ZEB MEGA



User Manual

www.zebronics.com

Thank you for purchasing the **“ZEB-MEGA”** Tower Speaker . Please read this user manual carefully before usage & save it for future reference.

Note:

- Avoid the use of this product at the high-temperature and high humidity environment.
- Avoid the self-disassembly of the product or it results in the failure of warranty.
- Turn off the speaker when the speaker is not in use.
- To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features:

- BT v5.1 | USB | FM | AUX | MIC Input
- LED display
- 20.32 cm Subwoofer
- Remote control
- Karaoke
- 6.3mm Microphone Input
- Integrated Media Control

Specifications:

Output Power (RMS) : 160W

Driver Size

Subwoofer	: 20.32 cm
Mid range	: 10.16 cm x 2

Impedance

Subwoofer	: 8Ω
Mid range	: 4Ω

Frequency Response : 20Hz-20kHz

S/N Ratio : ≥75dB

Separation : ≥45db

File format support : MP3 (USB)

Line input : 2ch RCA

Max Supported

USB/mSD memory size : 32GB

FM frequency

scan range : 88MHz - 108 MHz

BT name : ZEB-MEGA

BT version : v5.1

Product Dimension

(W x D x H) : 18 x 34 x 85 cm

Net. Weight : 13.03kg

Package Contents:

Speaker : 1 U

Remote : 1 U

 
Wireless Microphone : 1 U

Input cable : 1 U

QR Code Guide : 1 U


Product Description:

Control Panel

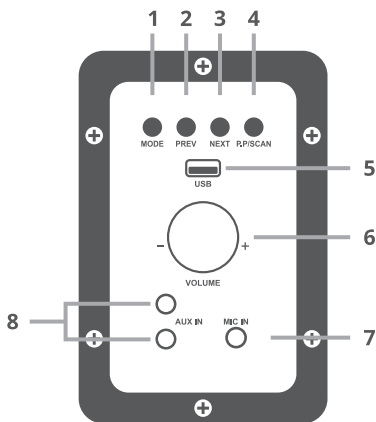


1. Mode Button
2. Previous Button
3. Next Button
4. Play-Pause / Scan Button
5. USB Port
6. Volume Increase / Decrease Knob
7. Mic IN
8. AUX IN

 Back Panel

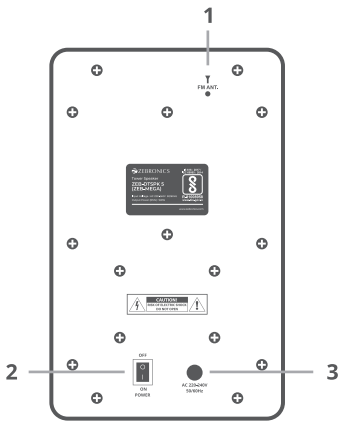

- 1. FM Antenna
- 2. Power On / Off Switch
- 3. AC Input

 Remote Control:

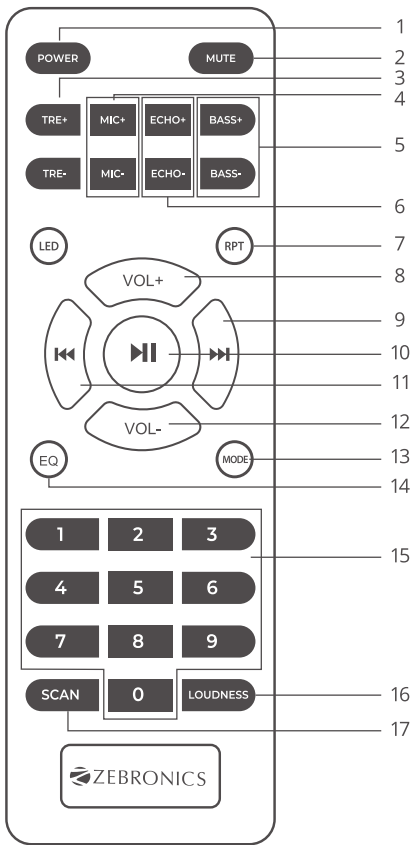

1. Power On-Off
2. Mute / Unmute key
3. Treble volume + / -
4. Mic Volume + / -
5. Bass volume + / -
6. Echo volume + / -
7. Press to Repeat One, FOD, RDO & All
8. Volume +
9. Single press Next song, Long press Fast Forward
10. Play / Pause key
11. Previous track / Long press Rewind
12. Volume -
13. Single press to Change Modes BT, AUX, FM, USB
14. Single press to EQ Change mode POP, ROC, JAZ, CLA, CUT
15. Numeric selection key (0-9)
16. Single press for LD - ON/OFF
17. Single press to Scan FM channels

Instructions for Use:

Button functions

- Short Press the "**Mode**" button to change the input mode (BT/AUX/USB/FM).
- Short press the "**Next**" button to Next track / Station in BT/USB/FM mode.
- Short press the "**Prev**" button to Previous track/Station in BT/USB/FM mode.
- Short press the "**Play/Pause**" button to Play/Pause/Mute the track in (BT, USB, FM).
- Long press the "**Scan**" button to auto scan the nearby available FM channels.

General Instructions:

BT Mode:

- Power ON the speaker, press "**Mode**" button to switch to BT Mode. Switch ON BT on your audio source device and search for nearby BT devices, Find the name "**ZEB-MEGA**" tap on it and select pair. Media controls are mentioned in the above button functions.

USB Mode:

- The speaker automatically switches to USB mode when a USB drive is inserted. Media controls are mentioned in the above button function.

FM Radio:

- Long press the **Play/Pause** button on the control panel or **Scan** button on the remote to initiate auto scan function. Once the scanning is done, the detected channels will begin to play. Use **Previous/Next** button on the control panel or remote to change the channels.

AUX-IN:

- The speaker can be connected to any external audio player using the provided RCA to 3.5mm cable. Connect the red & white RCA cable to the speaker's AUX input and connect the other end to any audio source with 3.5mm AUX output.

Instructions for Mic Settings & Repeat

Mic Priority

- To turn On / Off Mic Priority Long press play/pause button on remote.

nS

- On karaoke to Adjust Background music Volume Long press EQ Button to enter nS mode, then Adjust the Background music volume from 0 - 16.

RPT

- single press RPT Button on Remote for first press there is ONE this mode repeat a single song in loop.
- Next press FOD this mode repeat all songs on this folder in loop.
- Next press RDO shuffles all song in all folders.
- Next press ALL repeats all songs in order.

