 




Tower Speaker
SUNSHINE PRO

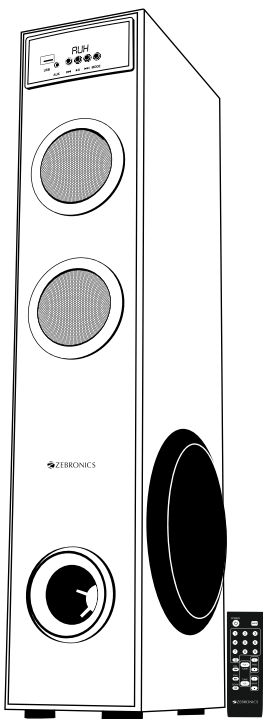

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing our **ZEB-SUNSHINE PRO** Tower Speaker. Please read the user manual carefully and save this manual for future reference

Note:

- Avoid the usage of the product at high temperature and high humidity environment.
- Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.
- Turn off the speaker when the speaker is not in use.

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Features

BT 5.0/USB/FM/AUX/MIC Input

LED display

13.33cm Subwoofer

Remote control

Karaoke support

Specification


Output Power (RMS)	:50W
Driver Size	
Subwoofer	:13.33 cm
Mid	:7.62 cm x 2
Impedance	
Subwoofer	:8Ω
Mid	:4Ω
Frequency response	:40Hz- 20kHz
S/N Ratio	:≥70dB
File format	
support(USB)	:MP3
Line input	:2ch RCA
Max supported	
USB memory size	:32GB
FM frequency	
scan range	:87.5MHz - 108MHz
BT name	:ZEB-SUNSHINE PRO
BT version	:5.0
Product Dimensions	:14.8 x 23.5 x 67 cm
(W x D x H)	
Net. Weight	:5 Kg

Package Content

Speaker	:1 U
Remote	:1 U
Input Cable	:1 U
QR Code Guide	:1 U

Product Description:

 Control panel image

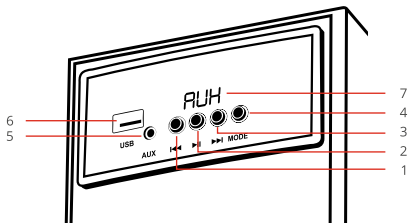

1. Previous button

2. Play/Pause

3. Next button

4. Mode button

5. Aux input

 
6. USB

7. LED Display

Back Panel



Remote Control

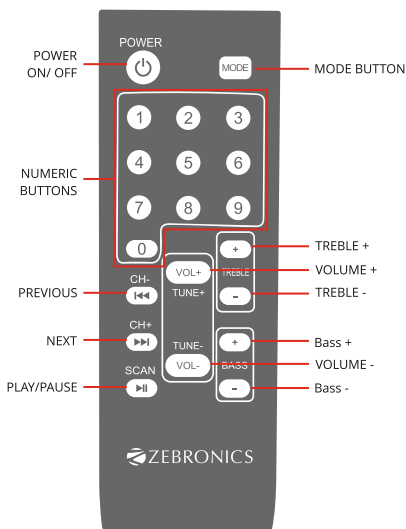

Power : ON/OFF

Numeric Pad (0-9) : To enter FM Channel Frequency directly.

CH - : Go to previous track in USB /BT mode & to previous channel in FM mode.

VOL + : To increase master volume.

Mode : To switch between BT/AUX/USB/FM

CH + : Go to next track in USB/BT mode & to next channel in FM mode.

Bass + : To increase the bass volume level

Play/Pause : To play/pause audio output in BT/USB and to scan available channels in FM mode

VOL - : To decrease master volume.

Bass - : To decrease the bass volume level

Instructions for Use:

Button functions

1. Press the “**Mode**” button to change the input mode (BT/AUX/USB/FM) of the speaker.
2. Short press the “**Next/FM tune+**” button to change the Next track or channel when in BT/USB mode or FM mode respectively.
3. Short press the “**Prev/FM tune-**” button to change the Previous track or channel when in BT/USB mode or FM mode respectively.
4. Long press the “**Scan**” button to scan all FM channels available.

General Instructions

BT Mode:

Turn ON the speaker, press “**Mode**” button to switch to BT Mode. Switch ON BT on your phone or tablet and search for nearby BT devices, Search for the BT name “**ZEB SUNSHINE PRO**” and tap to connect it.

AUX-IN:

Press the **Mode** button to select **AUX** mode. The speaker can be connected to an audio source using a RCA to 3.5mm cable. Connect the RCA connector to the speaker and the 3.5 mm Aux connector to an audio source. The songs from the audio source can be heard through the speaker.

USB Mode:

The speaker automatically switches to **USB** input mode when a USB flash drive is inserted into the speaker. The songs from the USB audio source can be heard through the speaker (this mode isn't selectable on the speaker unless a USB flash drive is connected). Single Press The **PREV** to switch to previous audio track and Single Press the **NEXT** button to switch to next audio track.

FM radio:

Press the **Mode** button to select **FM** mode. Long press **Play Pause** button to initiate FM Scanning process. Once the scanning process is done, the Speaker automatically plays the First channel of the FM. Press **Prev** to switch to previous FM channel and Press **Next** to switch to next FM channel.

