

 ZEBRONICS

PRO *Series Y*



ZEB-NBC 1S

User Manual

www.zebronics.com

Thank you for purchasing **ZEB-NBC 1S**. Please read this user manual carefully and keep it for future reference.

Note:

- ▶ *Avoid the usage of this product at the high temperature and high humidity environment.*
- ▶ *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- ▶ *For Upgrading your Laptop, Please visit our authorized service centre near your location.*











For complete list of Zebronics service centre

<https://zebronics.com/pages/service-centres>

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

What's Inside

1. Product Overview 
2. Getting Started with your Laptop 
 - 2.1 Charging your Laptop 
 - 2.2 Booting your Laptop for the First Time 
 - 2.3 Using your Keyboard 
 - 2.4 Using your Trackpad 
3. Getting Started with Windows 
4. BIOS Menu 
5. Technical Specifications of the Laptop 
6. FAQ 

Product Overview



- | | | | |
|---|----------------|----|--------------------|
| 1 | DC Jack | 7 | Keyboard |
| 2 | USB 3.2 Type A | 8 | Fingerprint Sensor |
| 3 | Mini HDMI | 9 | Trackpad |
| 4 | Type C Port | 10 | mSD Slot |
| 5 | Webcam | 11 | USB 3.2 Type A |
| 6 | Display | 12 | Headphone Jack |

2. Getting started with your Laptop


2.1 Charging your Laptop

▶ You can charge your Laptop using the dedicated Type C charging port which is present in the Laptop.



- ▶ Connect the Type C connector to the charging port of the Laptop and plug the charger into an AC power outlet.
- ▶ The Laptop has a constant Red LED indication when the Laptop is charging. The indicator turns Blue when the Laptop is completely charged.

 
2.2 Booting your Laptop for the First Time

Lift the laptop screen and press the power button  to boot your laptop for the first time.



2.3 Using your Keyboard

The laptop offers a full size keyboard with integrated multimedia keys. They are as follows

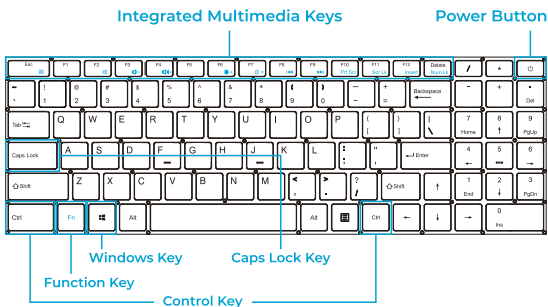


Keyboard Multimedia Functions

Key	Function
F1	Sleep
F2	Mute
F3	Volume -
F4	Volume +
F5	Brightness -
F6	Brightness +
F7	Play / Pause
F8	Previous
F9	Next
F10	Print Screen Function
F11	Scroll Lock Function
F12	Insert Function
ESC	Track Pad Lock / Unlock
DEL	Num Lock

2.4 Using your Trackpad

 The Laptop offers a Spacious trackpad along with fingerprint sensor. The trackpad supports Windows 11 trackpad gestures. There are a list of windows gestures which are supported by the laptop

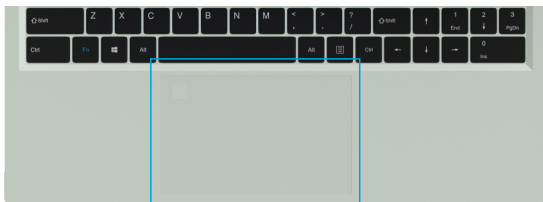

Trackpad Functions


Action	Gestures
Select an item	Tap touchpad
Scroll	Place two fingers on the touchpad and slide horizontally or vertically
Zoom in or out	Place two fingers on the touchpad and pinch in or stretch out
Show more commands (like right clicking)	Tap the touchpad with two fingers or press down in the lower right corner
Show all open windows	Swipe with three fingers up on the touchpad
Show the desktop	Swipe with three fingers down on the touchpad
Switch between open apps or windows	Swipe with three fingers left or right on the touchpad
Switch desktops	Swipe with four fingers to the left or right on the touchpad

3. Getting Started with Windows


3.1 Setting up your Windows

Step 1 : Turn on your Laptop and wait until the windows is completely booted into welcome screen.



 
Step 2: Select your Country and Language.

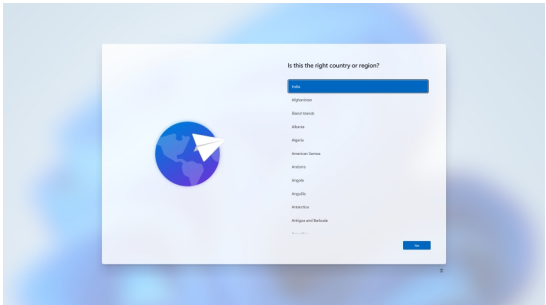

 Step 3: Select your Keyboard layout.

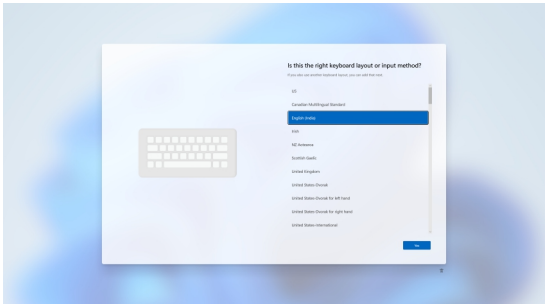

   If you want to add an additional keyboard layout follow the below steps

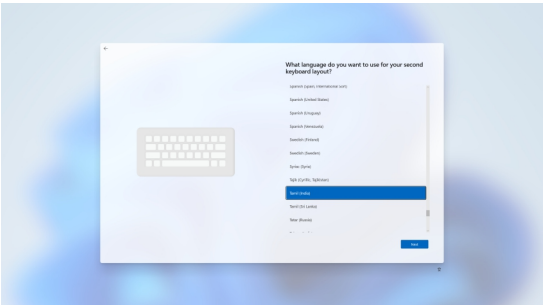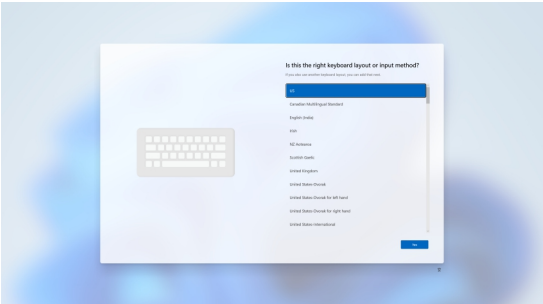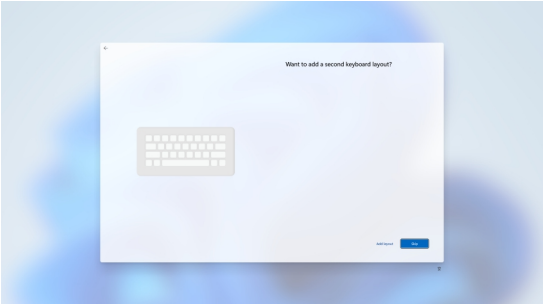


Step 4: Setting up Internet


- ▶ Select the Wi-Fi Connection and press the connect button

(Tick the connect automatically option to auto connect to internet on next boot up)


 
- ▶ Enter the password of the Wi-Fi connection

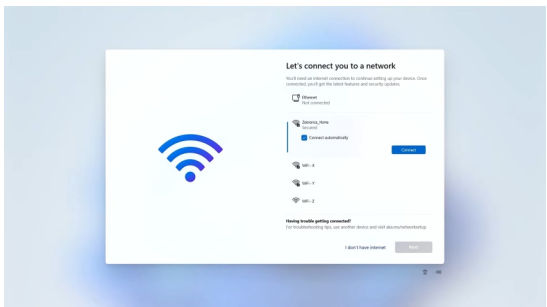

 
Step 5: Review End user license agreement

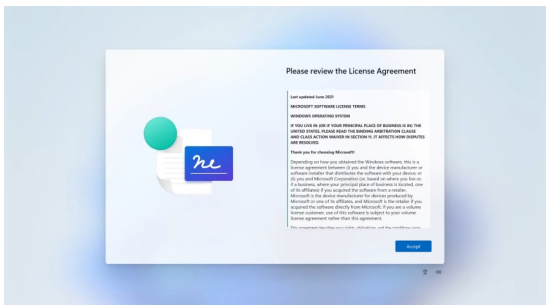

 
 
Step 6: Sign into your Microsoft account

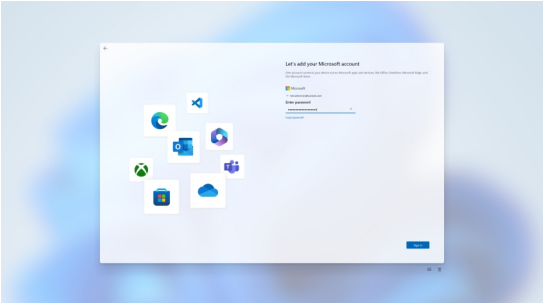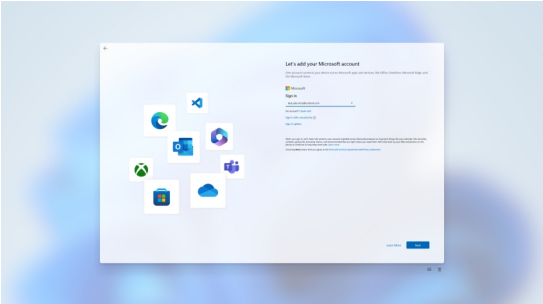

 
Step 7: Restoring your backup files


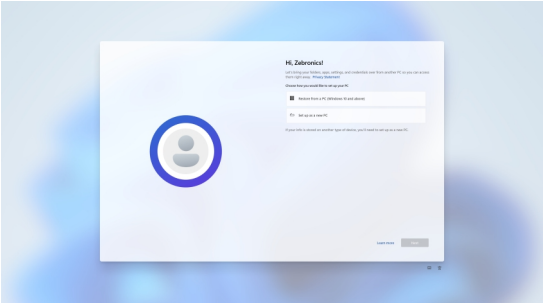


  Step 8: Setting up the password/pin.

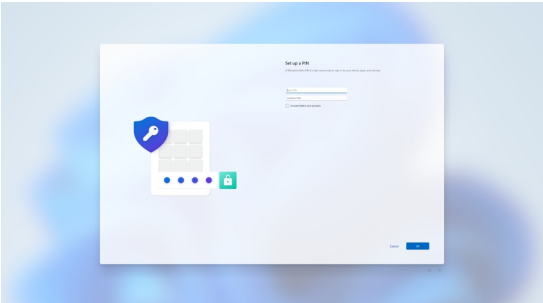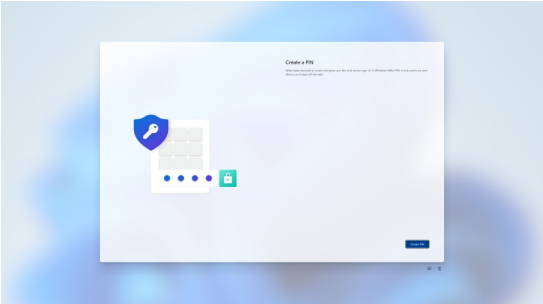

   
Step 9: Setting up Fingerprint sensor.

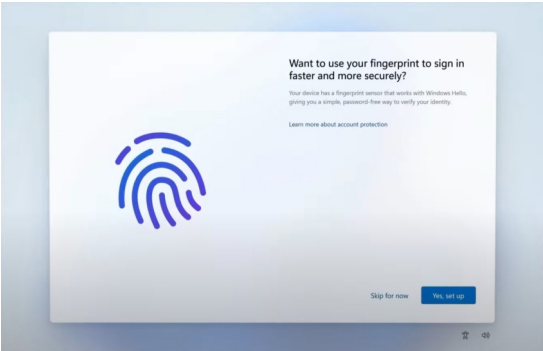

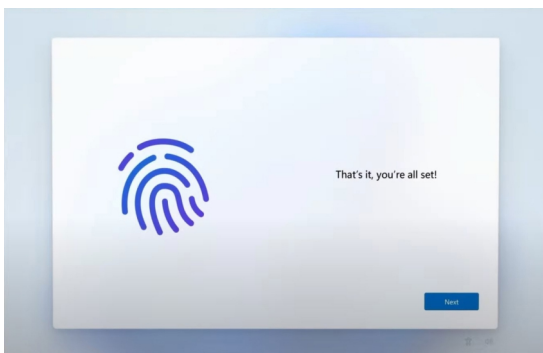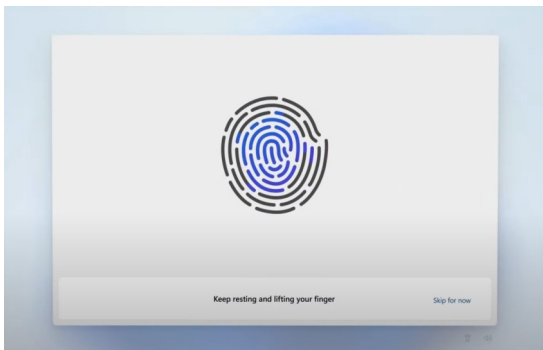


Step 10 : Setting up the privacy settings for your laptop

 
Select the privacy settings according to your preference and turn off the settings that you don't want to share with Microsoft

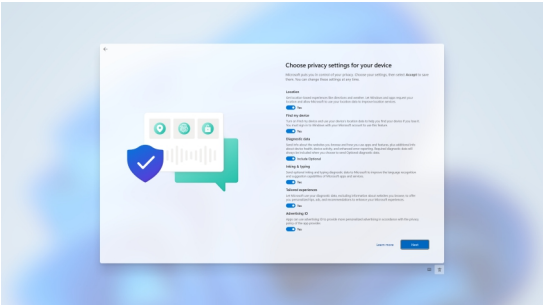

 
Step 11 : Customize your Windows Experience

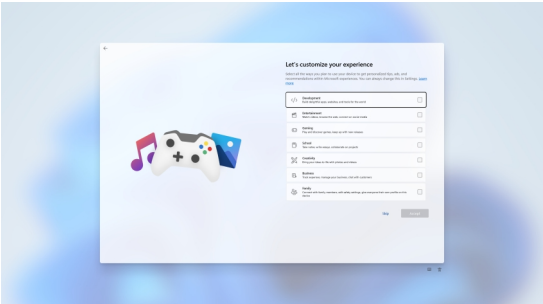

 
Step 12: Use your phone on the PC

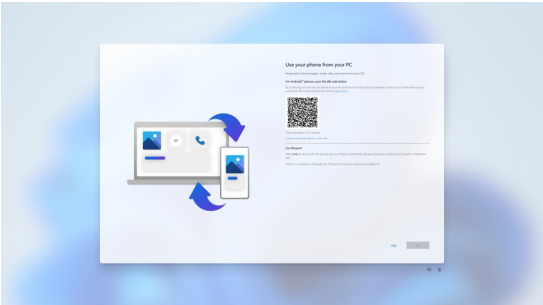

 Step 13: Updating your windows

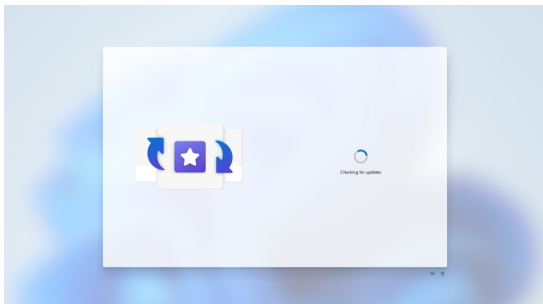

 Step 14: Finishing Up

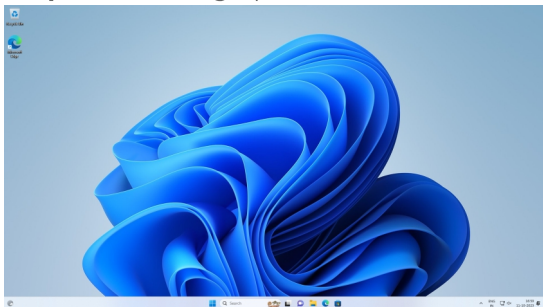

Customizing your windows

Step 1: Right click on the desktop, Select Personalize Option

Step 2: Select Background option to change your Desktop background

Step 3: Select Colors option to change your Accent color

Step 4: Select Background option to change your Desktop background

Setting up your Internet Connection

Step 1: Open Settings option.

Step 2: Under settings, Select network and internet.

Step 3: Under network and internet, Select Wi-Fi option.

Step 4: Select Show available networks option and select the network that you want to use.

Step 5: Enter password for the selected network and click on connect.

Now you are successfully connected to your laptop

4. BIOS Menu

BIOS stands for (basic input/output system). It is a Program which is used to start your Laptop after turning on your laptop.

4.1 Entering into BIOS menu

► Press the delete button to enter into the BIOS menu.

5. Technical Specifications

Features

- ▶ Intel Core i3-1125G4 Processor
- ▶ 39.6cm (15.6) | IPS Display | FHD 1080p Screen
- ▶ Slim Chisel Design
- ▶ USB3.2 x 2 | Type C Port | mSD Slot | 3.5mm HP | Mini HDMI
- ▶ 8GB RAM | 512GB M.2 SATA SSD
- ▶ Windows 11 Home
- ▶ 2.4GHz and 5GHz Dual Band Wi-Fi, BTv5.0
- ▶ Fingerprint Sensor | Webcam | Dual Driver Speakers
- ▶ 65W Type C Charging | 38.5Wh Battery
- ▶ Display Out from Mini HDMI or Type C (1080p)

Specifications

Processor	: Intel® i3-1125G4 (11th Generation) Processor, Max Turbo 3.7GHz
Graphics	: Intel® UHD Graphics
Display	: 39.6cm (15.6), IPS, FHD 1920x1080p, 16:9
OS	: Windows 11 Home
RAM	: 8GB LPDDR4, 3200MHz, Soldered
Storage	: 512GB M.2 SATA SSD**
Ports	: Mini HDMI, 2 x USB 3.2

Gen1, Type C 3.2 Gen1
Port, mSD Slot, 3.5mm
Headphone Jack +
Microphone

Wireless

Connectivity : 802.11 a/b/g/n/ac 2.4 GHz &
5 GHz Wi-Fi, BT v5.0

Webcam : 2MP

Speaker : Dual Drivers

Charging

Time : 3.5h Approx.

Battery : 38.5Wh Built-in
Rechargeable Battery, 10h*

Net. Dimension

(W x D x H) : 36 x 23.5 x 2 cm

Net. Weight : 1.65kg

Package Contents

Laptop : 1 U

Power Adapter : 1 U

Quick Start Guide : 1 U

QR Code Guide : 1 U

**Depends Upon Usage*

***Upgradable up to 512GB M.2 SATA SSD (2242)*

6. F.A.Q

For frequently asked questions kindly
visit the link below

<https://zebronics.com/pages/product-faq>

Zebronics India Pvt. Ltd.,

ISO 9001:2015 Certified Company

Helpline No. : 044 4000 0004

E-mail : enquiry@zebronics.com

www.zebronics.com

