





User Manual

www.zebronics.com www.zebclan.com Thank you for purchasing **ZEB-MAX PLAY** wireless gaming pad. We recommend you to check the information given in this user manual before use. You can use this for future reference.

Note

- Kindly charge ZEB-MAX PLAY wireless gaming pad with a 5V DC USB power input, using the charging cable given inside package
- Ensure that the device is fully charged before first time usage. You can notice that the LED indication turns OFF, once the device is fully charged.
- ZEB-MAX PLAY is a plug and play device. You can use this device without drivers in X input mode. For activating dual vibration in Direct input mode, you can follow the next step to install the driver tool.
- Download the tool from the following link: https://zebronics.com/pages/drivers

this tool can help you check with the buttons & activate dual vibration in the game pad.

• ZEB-MAX PLAY enters sleep mode while left unused for few minutes. Simply press the MODE button to wake up the game pad.

Features

• 2.4GHz wireless

- USB Nano-receiver
- Ergonomic and comfortable design
- Dual vibration motors
- Dual analog sticks
- LED indicator
- Quad front triggers
- Rechargeable Built-in Battery
- Plug & Play

Specifications

Interface : USB Receiver

Compatible OS : Windows

Wireless range : 8-10 Meters No. of Buttons : 17

No. of Analog sticks : 2 No. of vibration motors : 2

Charging Time : 2H approx.


Usage Time : 10H*

Product Dimension : 160 x 105 x 60 mm

 $(W \times D \times H)$

Net Weight : 190g

Device representation & controls:

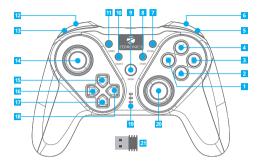

- 1-4 Controls A / B / X / Y respectively
 - 5 Trigger R1
 - 6 Trigger R2
 - 7 Clear button
 - Start button
 - Mode button
- 10 Select button
- 11 Turbo button
- 12 Trigger L2
- 13 Trigger L1
- 14 Analog stick (X,Y)
- 15-18 Direction pad Up / Right / Down / Left
 - 19 LED indicators
 - 20 Analog stick (Z)
 - 21 USB Nano receiver

Usage steps

- 1. Connect the USB Nano receiver to your PC's USB port.
- 2. Kindly ensure if the game pad is adequately charged before use.
- 3. Press the MODE button to wake up the game pad.
- 4. The LEDs would stop blinking, once it gets connected to your PC.
- 5. (The above step could take few moments) You can check the PC's device manager menu / recognized device list for checking the device connection.
- 6. Now you can use the game pad in various games.

Direct input mode / X input mode

To toggle between Direct input mode and X input mode, simply press and hold the MODE button for 5 seconds. Kindly check your game details, to see if it supports X input mode or Direct input mode.

Enable / Disable the analog input from the sticks

To enable or disable the analog input with the analog stick, press the MODE button once. This can be identified with the LED indication while the 2nd LED glows.

Turbo function

Press and hold the TURBO button and the other button (A/B/X/Y) of preference, for 5 seconds. This helps to use the key for continuous input while gaming. To disable the function, you can press and hold the CLEAR button and the other button (A/B/X/Y) selected previously, for 5 seconds.



ISO 9001:2015 Certified Company www.zebronics.com www.zebclan.com