

# ZEBRONICS

## Smart **LED TV**

ZEB-**55W2**

powered by  
webOS TV



## User Manual



[www.zebronics.com](http://www.zebronics.com)

Thank you for purchasing the **ZEB-55W2** Smart LED TV. Please read this user manual carefully and keep for future reference.

**Important Safety Instructions**

**WARNING**

- To prevent fire or shock hazard, do not expose this appliance to rain or moisture.
- This appliance shall not be exposed to dripping or splashing and that no object filled with liquids, such as vases, shall be placed on the apparatus.

 <p>The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.</p>	<div><b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b> <b>DO NOT OPEN</b></div> <p>To reduce the risk of electric shock, do not remove cover (or back). Refer to qualified service personnel to open it.</p>	 <p>The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the television.</p>
---	---	--

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Importance of all warnings** - All warnings on the television and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating instructions should be followed.
5. **Do not use this television near water** - The television should not be used near water or moisture -

for example, in a wet basement or near a swimming pool etc.

6. Use only dry cloth for cleaning.

7. Do not block any ventilation openings. Install according to the manufacturer's instructions.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produces heat.

9. Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement.

10. Protect the power cord from being walked on or pinched particularly at the plugs and at the point where they exit from the television.

11. Only use attachments/accessories specified by the manufacturer.

12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the television. When a cart or rack is used, use caution when moving the cart/television combination to avoid injury from tip-over.

13. Unplug the television during lightning storms or when unused for long periods of time.

14. Get your servicing from qualified personnel. Servicing is required when the television has been damaged in any form, such as power supply cord or damaged plug, liquid has been spilled or objects have fallen on the television, the television has been exposed to rain or moisture and hence does not operate normally, or has been stopped working.

15. Caution: These servicing instructions are for use of qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than

that contained in the operating instructions unless you are qualified to do so.

16. Do not install this equipment in a closed space. Keep it in well ventilated conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.

17. Caution - To prevent electric shock hazard, please replace grille.

18. Please refer the information on rear enclosure for electrical and safety information before installing or operating the television.

19. To reduce the risk of fire or electric shock, do not expose this television to rain or moisture.

20. The television shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the television.

21. For the terminals marked with symbol of " ⚡ " may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals require installation by an instructed person or the used of ready-made leads or cords.

22. To prevent injury, use the stand/ wall- mount bracket to securely install this television on the table/wall in accordance with the installation instructions.

23. Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type. The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.

24. Excessive sound pressure from earphones and headphones can cause hearing loss. Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.




25. The appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.







26. When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie. It shall be free from sharp edges and the like that can cause abrasion of the power cord set. When put into use again, please make sure the power cord set being not damaged, if any damages found, please look for the service person to replace the power cord set specified by the manufacturer or have the same characteristics as the original one.

27. Attention should be drawn to environmental aspects of battery disposal.

28. No fire objects such as lighted candles should be placed on the television. To prevent the spread of fire, keep fire objects or other open flames away from the television at all times.

29. If the television has the symbol  in its rating label and the power plug has two pins, it means that the equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth. (Only for Class II appliance)

30. The following information are recommended to be included as far as applicable where applicable :

	Refers to Alternating Current (AC).
	Refers to Direct Current (DC).
	Refers to Class II Equipment.
	Refers to Stand-By.
	Refers to Power ON.
	Refers to Dangerous Voltage.

## **Warning for television containing Coin / Button Cell Batteries**

(Below instruction only used for the television containing a user-replaceable coin/button cell battery).

- Refrain to ingest battery which can lead to chemical burn hazard. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

## **Positioning the TV**

- Install Display on solid horizontal surface such as a table or desk. For ventilation, leave a space of at least 10cm free all around the set. To prevent any fault and unsafe situations, please do not place any objects on top of the set. This apparatus can be used in tropical and/or moderate climates.

- Fix the rear of enclosure to wall.
- **Warning:** Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

1. Using cabinets or stands recommended by the manufacturer of the television.


2. Only using furniture that can safely support the television.

3. Ensuring the television is not overhanging the edge of the supporting furniture.

4. Not placing the television on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.

5. Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.

6. Educating children about the dangers of climbing on furniture to reach the television or its controls. If your existing television set is being retained and relocated, the same considerations as above should be applied.

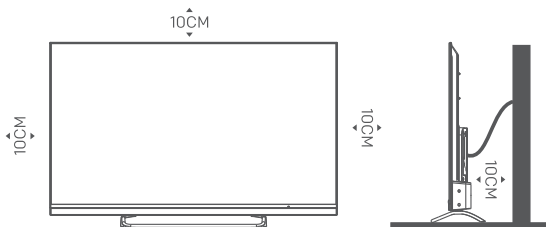


***Note :** This picture is only for reference purpose.*

## **Mounting on a Wall**

- An optional wall mount can be used with your television. Consult with your local dealer to purchase the recommended wall mount bracket. Carefully attach the wall mount bracket at the rear of the TV. Install the wall mount bracket on a solid wall perpendicular to the floor. If you are attaching the TV to other building materials, please contact qualified personnel to install the wall mount. Detailed instructions will be included with the wall mount. Please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices.
- Disconnect the power before moving or installing the TV. Otherwise electric shock may occur. Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- If you install the TV on a ceiling or slanted wall, it may fall and result in severe injury. Use an authorized wall mount and contact the local dealer or qualified

personnel. Otherwise it is not covered by the warranty.

- Do not over tighten the screws as this may cause damage to the TV and void your warranty .
- To prevent injury, this apparatus must be securely attached to the floor/ wall in accordance with the installation instructions.
- Use the screws and wall mounts that meet the following specifications. Any damages or injuries buy misuse or using an improper accessory are not covered by the warranty.

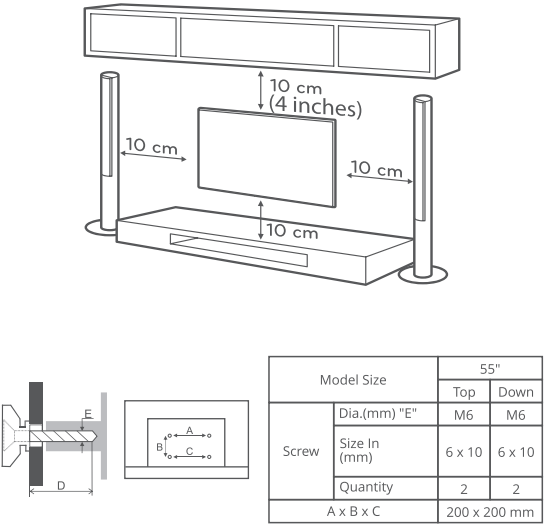

**Note:**

1. The Pictures are only for reference.
2. For the TV sets with terminals towards the wall, in order to leave enough space to use the terminals, a rubber cushion is needed together with each screw to fix the wall mount. It is a small hollow pillar whose internal diameter is 8mm, external diameter is 18mm and height is >30mm.

## Battery Usage

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

1. Please note the batteries' polarity, to avoid short circuit.

2. When the battery's voltage is insufficient which affect the use range, you should replace new battery . Remove the batteries from the remote control unit if you do not intend to use it for a long time.

3. Do not use different types of batteries (for example, Manganese and Alkaline batteries) together .

4. Do not put the battery into fire, and charge or decompose the battery .

5. Please dispose batteries abide by relevant environmental protection regulation.

6. **WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

7. Do not mix new batteries with old batteries. This may cause the batteries to overheat and leak.

8. Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.



9. This apparatus uses batteries. In your community there might be regulations that require you to dispose of these batteries properly due to environmental considerations. Please contact your local authorities for disposal or recycling information.

10. Batteries inside or inside the product shall not be exposed to excessive heat such as sunshine, fire or the like.

11. In Analogue TV and some countries, some remote control buttons may not work.

## Understanding your TV

### Rear Side Connectivity



**USB Interface:** Insert a compatible thumb drive for image, audio & video playback.

**RJ45 LAN:** Plug in network RJ45 plug to connect to an external modem or network access equipment.

**AV Input:** The AV IN sockets can be used to connect a range of equipment, including AV IN AUDIO video recorders, camcorders, satellite receivers, DVD players, or gaming consoles. THE VIDEO IN socket provides composite video connection.

**Earphone Out:** This socket is used to connect Headphone/L-R out with TV to Hometheatre or Headphone.




**HDMI 3/HDMI 2/HDMI 1 Socket (Input):** The HDMI (High-Definition Multimedia Interface) socket can be used to connect with a HDMI-PC with a compatible video card, certain DVD players or an HD compatible digital satellite decoder. This socket provides an uncompressed digital connection that carries both video and audio data by way of an integrated mini-plug cable. ARC (Audio Return Channel) function is only supported on HDMI 2 (ARC) port for this model.






















**RF/ANTENNA IN Socket (Input):** Lets you connect a coaxial cable to receive the signal from your antenna, cable or cable box

**OPTICAL OUT:** Connect to an external digital audio device.

# Magic Remote Control



Button	Function
Power	 Turns the TV on or off.
STB Power	 You can turn your set-top box on or off by adding the set-top box to the universal remote control for your TV.
Number 0-9	Number button enters numbers. Accesses the [QUICK HELP].
	(DASH) Inserts a - between numbers such as 2-1 and 2-2. Accesses the saved programmes list.



Button	Function
QUICK ACCESS**	Edits QUICK ACCESS. QUICK ACCESS is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.
• • •	(MORE ACTIONS) Displays more remote control functions.
AD/SAP**	Audio descriptions function will be enabled or disabled.
Volume 	Adjusts the volume level.
Mute 	Mutes all sounds. ** Accesses the Accessibility menu.
Scroll 	Scrolls through the saved programmes.
Voice 	(Voice recognition) Network connection is required to use the voice recognition function. Once the voice display bar is activated on the TV screen, press and hold the button and speak your command out loud.
Home 	Accesses the Home menu ** Shows the previous history.
Setting 	Accesses the Quick Settings ** Display the All Settings menu.
Wheel 	Wheel (OK) Press the center of the  button to select a menu. You can change programmes by using the  button. (up/down/left/right) Press the up, down, left or right button to scroll the menu. If you press     buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.
Back 	Returns to the previous level. **Clears on-screen display and returns to last input.
 GUIDE	GUIDE Shows programme guide.
 	Streaming Service buttons Connects to the Video Streaming Service. **(ALEXA) Press and hold Prime Video key to accesses the Alexa
	Changes the input source. **Accesses the Home dashboard.
	These access special functions in some menus.
	Runs the record function.
	Controls media contents.
Movies	Movie Key heil to scratch movies into installed applications.

\*\* To use the button, press and hold for more than 1 second.





## How to pair the Magic Remote Control


To use the Magic Remote, first pair it with your TV.

1. Put batteries into the Magic Remote and turn the TV on.
2. Point the Magic Remote at your TV and press the  Wheel (OK) on the remote control.
3. If the TV fails to pair the Magic Remote, Pressing and holding  the button will let you cancel and re-pair Magic Remote at once.

## How to unpair the Magic Remote Control

Press the  (BACK) and  (HOME) buttons at the same time, for five seconds, to unpair the Magic Remote with your TV.


## How to use Voice Command

 Press and hold to give command through ThinQ AI.

 Press and hold to give command through Alexa.

## General Operation

### Basic Key Functions

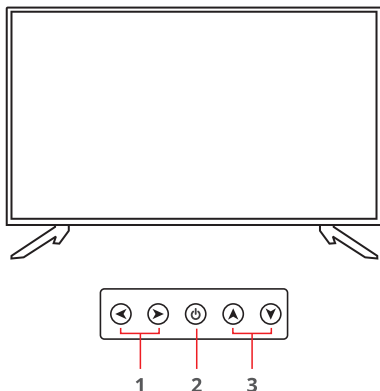











1. Volume Increase or Decrease
2. Power ON (Single Press)  
Power OFF (Press and Hold)
3. Toggle between Channels

### Resetting Lost Password

The initial password is set as "0000".

If you lose the password you set, you can reset it as follows:

1. Press the  button on the remote control.
2. Select  → General → Safety.
3. Press  (Programmes)  →  (Programmes)  →  (Programmes)  →  (Programmes)  on the remote control. The master password input window will appear.
4. Enter the numbers "0313" in the master password input window, then press Enter. The password will be reset to initial "0000".

## Network Connection

To access the internet, you must subscribe high speed broadband internet service from your internet service provider. Your TV can be connected to your home network in two ways:


- Wired, using the RJ45 (LAN) connector on the back panel.
- Wireless, using the internal wireless or external wireless USB adapter and your home wireless network.

**Note:** This function is not available for certain models. Instructions below are just the usual ways to connect your TV to the wired or wireless network. The connection method may be different depending on your actual network configuration. If you have any questions about your home network, please refer to your ISP (Internet Service Provider).

### Connecting to a wired network

To connect to a wired network:

1. Ensure you have:
  - An ethernet cable long enough to reach your TV
  - A router or modem with an available Ethernet port
  - A high-speed internet connection
  - An Ethernet (LAN) port on the back of the TV
2. Connect your ethernet cable to the router and to the Ethernet port on the back of the TV.
3. Use the Network Settings to configure the TV.

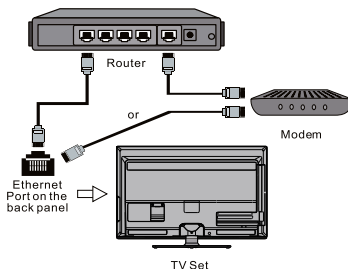


## Connecting to a wireless network

To connect to a wireless network

1. Ensure you have:
  - A router broadcasting a high-speed wireless signal
  - A high-speed internet connection
2. The TV set with Wi-Fi Module.
3. Use the Network menu to configure the TV.

**Note:** Some models may have internal wireless module, then the wireless USB adapter is unnecessary. Some external wireless adapters cannot be compatible with the TV.

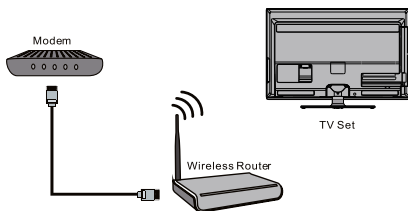

## **Operating your TV**

### **TV Setting:**

Your TV comes with many feature and enhancements to help process the picture & sound that you receive this article will help you to found the optimal setting.

### **Quick Setting**

To access Quick setting  press setting key on your remote control after that you can see these options.

#### **Picture Mode:**

If you would like to configure the settings for your picture then there are five modes (Vivid, APS, Cinema, Cricket, Game) are available.

#### **Sound Mode:**

There are six mode (Standard, Cinema, Clear Voice III, Cricket, Music, Game) available to give you the suitable sound experience for various situation. You can also On/Off Ultra Sound.

#### **Sound Out:**

Select device or speaker for audio output. There are eight options (Internal TV Speaker, Bluetooth, Mobile Device, Optical, HDMI ARC, Wired Headphone, Optical + Internal TV Speaker, Wired Headphone + Internal TV Speaker) to choose your desired output.

#### **Sleep Timer:**

You can set sleep timer by choosing the time in the available options.

#### **Network:**

This option takes you to network connection setting where you can configure setting for the network and you can use various service such as online contents and applications.

#### **All Setting:**

All the above options help you quickly setup TV according to your need. If you want more optimal setting to suit your taste than this setting helps you to

achieve your goal.

### **Edit Mode:**

You can add/delete the quick setting items or change their order.

## **Picture**

### **Picture Mode Setting:**

You can select desired picture mode & customize them.

### **Aspect Ratio Setting:**

You can change the screen size according to the type of content you are working.

### **Energy Saving:**

Reduces power consumption by adjusting screen brightness.

### **Additional Setting:**

In additional setting you found various options shown below.

### **Eye Comfort Mode:**

Which adjust colour temperature automatically to reduce by strain.

### **HDMI Ultra HD Deep colour:**

You can connect device that also supports Ultra HD Deep Colour your picture may be clearer.

### **Instant Game Response:**

You can view the optimised picture of the game with minimising delay.

## **Sound**

### **Sound Mode Setting:**

You can select desired Sound Mode from Sound Mode setting.

### **Sound Out:**

Select Sound Out Mode on TV.

### **Additional Setting:**

You found various setting inside it shown below.

**TV Installation Type:**

This mode optimizes the sound based on the TV setup.

**Volume Mode:****Auto Volume:**

Click On to adjust the volume automatically for different broadcasting companies so you can always listen to programmes at the desired volume, even after switching the programmes.

**Volume Increase Amount:**

Select Low/Medium/High to adjust the volume range. Higher values increase increments. This setting is only available for Internal TV Speaker.

**DTV Audio Setting:**

When different audio types exist in an input signal, this function allows you to select the audio type you want.

**AV Sync Adjustment:**

Adjusts the synchronization of the sound from the speaker that is working. The closer to the slower the audio output.

**HDMI Input Audio Format:**

You can set the audio format for each HDMI input. When the voice delivered through the HDMI port is not synchronized, set it to PCM.

**LG Sound Sync:**

By setting this feature to On, you can adjust the volume of the connected LG Sound Sync device using a TV remote control.

**Digital Sound Out:**

You can configure the Digital Sound Out settings.

- When Pass Through is enabled, sound effects may not be output.
- The codec output with a device may differ from input signals.

## **Programmes:**

### **Programme Tuning:**

Tune & save available programmes.

### **Auto Tuning:**

Automatically tunes the programmes.

1. Select Country where the TV is used. Programme settings change depending on the country you choose.
2. Initiate Auto Tuning.
3. Select programme tuning modes.
4. Set Auto Tuning following screen instructions.
  - If Input Source is not connected properly, programme registration may not work.
  - Auto Tuning only finds programmes that are currently broadcasting.
  - If Safety is turned on, a pop-up window will appear asking for password.

### **Manual Tuning:**

This function is for manually searching and saving programmes. For digital broadcasting, signal strength and signal quality can be checked.

### **Programme List Update:**

It updates the changed Programme List

### **Signal Test:**

Shows the MUX and Service information etc.

### **Programme Manager:**

Manage programmes stored on the TV.

### **Edit All Programmes.**

You can edit the selected programmes from all the stored programmes or add/delete them to/from the favourite programmes.

### **Edit Favourite.**

You can add/delete desired programmes to/from the favourite programmes, change their positions, etc.



## **HbbTV:**

HbbTV (Hybrid Broadcast Broadband TV) is a new broadcasting standard that enables super-teletext type services, delivered by a broadcast TV programme, to be integrated or linked to online services delivered over broadband to a connected Smart TV.

## **Connection:**

### **TV Name:**

You can use the screen keyboard to set the name for the smart TV to be used on the network.

### **Network Connection Setting:**

If you configure settings for the network, you can use various services such as online contents and applications.

### **Device Connection Settings:**

You can link the information about the devices connected to the TV and configure settings related to operations.

### **Mobile Connection Management:**

You can set to use a smart device connected to the TV to control the TV or manage the connection history.

## **General:**

### **AI Service:**

You can enable the recommended services based on the usage history.

### **Voice Recognition Help and Settings:**

You can change settings related to the speech recognition features, such as turning Voice Response on and off.

### **AI Recommendation:**

You can get content recommendation messages according to your content viewing history and app usage history.

**Language:**

You can choose the menu language displayed on the screen and the audio language of the digital broadcast.

**Location:**

You can change the location setting of your Smart TV. You can set the Region and City of your TV.

**Time:**

You can check the time or configure related settings.

**Safety:**

This function operates according to information from the broadcasting station. Therefore if the signal has incorrect information, this function does not operate. Prevents children from watching certain adult's TV programmes, according to the ratings limit set. Enter a password to watch a blocked programme. Rating differs by country. The initial password is set as "0000".

**Account Management:**

Managing Your Account. You can use Google, Facebook, Amazon account or you can use your email address to create a new account

**Home Settings:**

Home Auto Launch. You can set Home to launch automatically when turning on the TV.

**Additional Settings:**

You get various options like Setting Helps, Menu Transparency, Screen Saver, No Signal Image, Eco Mode, Quick Start+, Standby Light.

**Accessibility:****Audio Description:**

The contents on the screen will be described with voice for visually impaired viewers. You can use this function if the broadcasting company supports Audio Description for the visually impaired.

**High Contrast:**

When this feature is set to On, it adjusts the

background of some of the menus on the screen and font colours to highlight the contrast between the light and dark areas.

### **Grayscale:**

Change the colour of the menu on the screen to black and white tone to make its ambiguity very clear. Set to On.

### **Invert Colours:**

To enhance the visibility of the menus on the screen, you can invert and calibrate certain colours in some menus. Set to On.

### **Hard of Hearing:**

1. A caption will be provided for the hearing-impaired.
  - When the Hard of Hearing is turned On, it will be prioritized over the general captions.
  - Some models may not be supported.

Subtitles:

2. View subtitles when the TV station provides subtitled programming. Change Subtitles to On and select subtitle setting.
  - Some models may not be supported.
  - Applies to Digital broadcasting.

### **Subtitle:**

Set advance subtitle option. It work only when the broadcasting programme supports setting.

### **Support:**

#### **Software Update:**

Uses software update to check and obtain the latest version.

#### **Allow Automatic Updates:**

If set to On, updates will be proceeded automatically without asking when there is a new update after a version check.

#### **Check for updates:**

When checking for the latest update version, you can only perform updates if an update file of a later

version is available. The TV automatically checks your software version but, if necessary, you can perform a manual check.

### **TV Information:**

You can view information including Model, Serial Number, Device Name.

### **Notifications:**

You can view all notifications from TV apps and service at the same time. You can view and delete each notification message. For notifications that support shortcuts, you can go directly to that app or website.

### **Additional Settings:**

Set up additional feature related to customer support.

### **User Agreements**

These are the terms and conditions for privacy for the use of Smart TV-related services.

### **Legal Notice**

It's a legal notice for services provided via TV.

### **Open Source Software Notice**

You can view the instructions for each item.

### **Reset to Initial Settings:**



Return TV to its initial settings. This will revert all settings to their default values.


After reset, the TV will automatically turn off and on.

- If Safety is set to On, you should type the password to Reset to Initial Settings.
- Do not turn off the power during initialization.

## Major Features

### Home Dashboard

Press the  button on the remote control and select Home Dashboard. You can also press and hold the  button on the remote control.

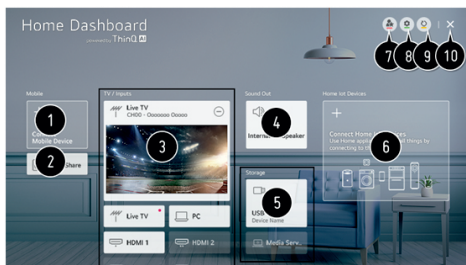



1. You can check and select the smart device connected with the LG ThinQ app.
2. You can play sound from a smart device connected via Bluetooth.
3. You can check and select the external device connected through the external input port or network.
4. The currently selected output speaker is displayed, and you can navigate to the output speaker settings screen.
5. You can view and select the connected storage device.
6. You can check and control the device connected via the Home IOT.
7. You can easily control your device by presetting the desired operations.
8. Sign In : You can log in/out to and from the LG ThinQ account you created on mobile.

Edit : You can edit the name of the device connected to Inputs or Home IOT Devices or configure the related settings.

9. It refreshes the device list.
10. Exit the Home Dashboard.

## Connecting Home IOT Devices

You can check and control the status of the connected Home IoT Devices.

1. Install LG ThinQ app on your smartphone.
2. Log in to your LG ThinQ account, and register your own LG ThinQ device.
3. Press the  button on the remote control and select Home Dashboard.
4. Press the  icon at the top right to select the Sign In.
5. Log in to your LG ThinQ account. A list of the registered LG ThinQ devices will appear.

- If you are in an area where the LG ThinQ app is not in service, LG ThinQ device connection will not be supported.

- If you are controlling the external device from your mobile app, you might not be able to control the device from your TV. Quit the mobile app to control it from your TV.

## Connecting Smart Devices

You can use a variety of features by connecting the TV to a smart device. Connecting Your Smart Device to a TV Using the LG ThinQ App

1. Download the LG ThinQ app from the app store of your smart device. You can download the app easily by scanning the QR code.



Android



iOS

2. Connect your TV and smart device to the same Wi-Fi network.
3. Run the LG ThinQ app installed on your smart device.
4. Follow the instructions from LG ThinQ app to connect your smart device to the TV.

When your account information of LG ThinQ is linked to the TV, you can manage the IOT devices linked to your account using Home Dashboard of the TV.

## **Controlling Your TV with the LG ThinQ App**

You can tap the buttons on your smart device's screen to control the TV.


### **Screen Share**

To See the Mobile Device's Screen on the TV

1. Enable Screen Share mode on the mobile device.
2. Your TV will be displayed in the list of available devices.
3. Select your TV and request connection.
4. Select Accept in the connection request popup window.
5. After the connection is established, the TV will display the screen of the connected device.

### **Sound Share**

Connect a smart device to the TV via Bluetooth to play sound from the smart device through the TV's speakers.

1. Turn the smart device's Bluetooth on, then select the TV from the list of devices.
2. The TV will be connected to the smart device. If the output speaker is set to Bluetooth or has a setup history, the TV may not be detected in the list of smart devices. If the output speaker is set to Bluetooth, press and hold the  button on the remote control to launch.

Home Dashboard, and then select Sound Share in the Mobile area to connect.

**Connecting USB**

Connect a USB storage device (USB HDD, USB stick) to the USB port on the TV to enjoy the content files stored on the USB storage device on your TV.

**Share Computer Content**

You can enjoy videos/music/photos stored on your PC on the TV when these devices are connected to the same network.

- 1. Connect your TV and PC to the same network.
- 2. Right-click the file you want to play and select “Cast to Device”.
- 3. Select the name of the TV you want to watch from the displayed list, and playback will start on that TV.

**Package Contents**

Smart LED TV	: 1 U
Remote Control	: 1 U
Batteries (AA)	: 2 U
Table Top Stand	: 2 U
Wall Mounting Bracket	: 1 U
Screws	: 4 U
Warranty Card	: 1 U
QR Code Guide	: 1 U



## Features

- 3 x HDMI / ARC (HDMI 2) / AV IN / 2 x USB / Optical OUT / Earphone / RJ45 / RF Input
- 300nits
- 3840 x 2160 4K UHD
- WebOS
- ThinQ AI
- App support
- Air Mouse
- Built-in Wi-Fi & BT
- Dual Bandwidth Wi-Fi
- Dolby Audio
- 139cm (55)
- Air Mouse
- 1.07B Colours
- HDR 10 | HLG
- Wall Mountable
- Bezel-less Design
- A Grade Display Panel
- Magic Remote With Alexa built-in
- 20W Speakers
- Glossy Panel

## Specifications

Processor	: CA55
GPU	: G31 MP2
RAM	: 1.5GB
Internal Storage	: 8GB
OS	: WebOS
Wi-Fi	: 2.4GHz / 5GHz - IEEE 802.11 a/b/g/n/ac
BT	: v5.0
LAN (RJ45)	: 10/100M Auto-Identification
Screen Size	: 139cm (55)
Refresh Rate	: 60Hz
Native Resolution	: 3840 x 2160
Aspect Ratio	: 16:9

Max. Brightness	: 300 nits
Viewing Angle	: V:178, H:178
Contrast Ratio	: 5000:1
Pixel Pitch	: 0.105(H) x 0.315(V)
Display colors	: 1.07 Billion
Response Time	: 8ms
Power Consumption	: 140W (Max.)
Speaker Output (RMS)	: 10W x 2
Audio file format support	: MP3/WAV/OGG/WMA/FLAC
Video file format support	: ASF / WMV / AVI / MP4 / M4V / MOV / 3GP / 3G2 / MKV / TS / TRP / TP / MTS / MPG / MPEG / DAT / VOB
Image file format	: JPEG / JPG / JPE / PNG / BMP
Receiving Range	: 48.25MHz ~ 863.25MHz
Connectivity	: Triple HDMI - 1 x HDMI (ARC) / 2 x HDMI IN   AV IN   2 x USB   Optical OUT   Earphone   RJ45   RF Input
Video System	: NTSC / PAL / PAL-M / PAL-N
Picture Profiles	: VIVID / APS / CINEMA / CRICKET
Sound Profiles	: STANDARD / CINEMA / CLEAR VOICE III / CRICKET / MUSIC / GAME
Product Dimension (W x D x H)	
Without Stand	: 1230 x 80 x 715 mm
With Stand	: 1230 x 265 x 765 mm
Net Weight (with Stand)	: 11.2 kg

## **Troubleshooting**

### **1. No image display and no sound is produced**

- Make sure the AC power cord is securely plugged into the wall outlet and the TV.
- Make sure the wall outlet is working & Check if there is a problem in the wall outlet by connecting other products.
- Try pressing the POWER button on the TV to make sure the problem is not the remote. If the TV turns on, refer to "The remote control does not work" below.
- Check cable connections (remove and reconnect all cables connected to the TV and external devices).
- Set your external devices' (Cable/Set top Box, DVD, Blu-ray etc) video outputs to match the connections to the TV input. For example, if an external device's output is HDMI, it should be connected to an HDMI input on the TV.
- Make sure your connected devices are powered on.
- Be sure to select the TV's correct source by pressing the SOURCE button on the TV remote.

### **2. Cannot control the TV with remote control**

- Check the remote control sensor on the product and try again
- Check if there is any obstacle between the product and the remote control
- Check if the batteries are drained out (leakage, spring rusty)
- Check for IR interference from other devices like CCFL, Tube light, etc.,
- Use of sub-standard batteries in TV remote may lead to leakage and permanent damage to remote.
- Remove batteries from remote if not using it for long time.
- Clean the transmission window located on the top of the remote control

### **3. TV turns off suddenly**

- Check the power control settings. The power supply may be interrupted
- TV will turn off automatically after 10/20/30/60/90/120/180/240 mins when sleep timer is enabled
- Check for electrical supply interruption (Switch, Fuse, MCB, etc.,)
- Check if too many electrical devices plugged into a multiple electrical outlet causing sparks (Recommended to use standard power socket)
- Check if there is no signal from external device (STB/DVD/Blu-ray player)

### **4. TV Cleaning**

- While cleaning the TV screen, unplug the power and wipe it with a soft cloth.
- Applying excessive force may cause scratches or discolouration.
- Do not spray water or cleaner directly on to the TV screen
- Make sure to spray just enough of water or cleaner on to a dry cloth to wipe the screen
- Make sure to wipe off excess water or cleaner by the cloth

### **5. Factory Reset**

- Follow the below path for TV Setting reset.  
Press Setting → All setting → Support → Reset to Initial Settings → Press Ok

## 6. TV Audio

Problem	Possible Solution
No sound is produced while images are displaying	<ul style="list-style-type: none"><li>• Press volume +/- button</li><li>• Check if the sound is muted by pressing mute</li><li>• Scroll to other channels. There may be a problem with the broadcast</li><li>• Check if the audio cables are connected properly</li></ul>
Source One of the speakers produce noises or does not produce sound	<ul style="list-style-type: none"><li>• A change in ambient humidity or temperature may result in an unusual noise when the product turns on/off</li><li>• There is no problem with your product.</li></ul>
Low sound	<ul style="list-style-type: none"><li>• Check the TV and source volume level (STB, DVD player, etc.)</li><li>• Check auto volume function on/off</li></ul>
Cracking Sound	<ul style="list-style-type: none"><li>• Cracking sound coming from TV in ON or OFF conditions is not a problem or defect. This sound is generated by thermal contraction &amp; Expansion of TV Cabinet. This is caused due to environment changes in Temperature, Humidity. This is common phenomenon &amp; property of plastic materials</li></ul>

## 7. TV Video

Problem	Possible Solution
An image displays in black and white or the color quality is poor	<ul style="list-style-type: none"><li>• Adjust the color setting in the picture menu</li><li>• Keep a sufficient distance between this product and other electronic products</li><li>• Scroll to other channels. There may be a problem with the broadcast</li></ul>
Horizontal or vertical bars appears or images blur	<ul style="list-style-type: none"><li>• Check if there are local interferences such as an electrical appliance or power tool</li></ul>
Lines or streaks appear on images	<ul style="list-style-type: none"><li>• Check the antenna or aim the antenna to the proper direction</li></ul>
After images (Ghosts) appear when the product turns off	<ul style="list-style-type: none"><li>• Pixels may have been damaged from a fixed image displayed for a long time (Image burn).</li><li>• Use a screen saver to prevent the pixel damage on the screen</li></ul>
The power is on but the screen appears extremely dark	<ul style="list-style-type: none"><li>• Adjust the brightness and contrast in the picture menu</li></ul>

Problem	Possible Solution
"No signal" appears on the screen	<ul style="list-style-type: none"><li>• Check if the signal cable is connected between the TV and products properly</li><li>• Check the selected input source by pressing Input</li></ul>
Thin lines appear in the background of the screen	<ul style="list-style-type: none"><li>• Check the video cable connections</li></ul>
The reception on some channels is poor	<ul style="list-style-type: none"><li>• Scroll to other channels. There may be a problem with the broadcast</li><li>• The station signal may be weak. Aim the antenna to the proper direction</li><li>• Check if there is local interference such as an electrical appliance or power tool</li></ul>

## License



ThinQ AI is an artificial intelligence technology platform of ThinQ, which is LG's AI brand



Amazon Alexa also known simply as Alexa, is a virtual assistant technology which is Amazon's brand



The Adopted Trademarks HDMI, HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio and the double-D symbol are trademarks of Dolby Laboratories.

**Note:** 1. The information in this document is subject to change without notice. The manufacturer accepts no liability for damage resulting directly or indirectly from faults, incompleteness or discrepancies between the user manual and the product described.  
2. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV as you will.

## **E-Waste Disposal**

M/s. **Zebronics India Pvt. Ltd.**, No. 118, Poonamallee High Road, Vepery, Chennai - 600084, Tamil Nadu, has done agreement with **ECOVERVA E-WASTE RECYCLING PRIVATE LIMITED**, Address: STS 132, First Floor, DLF Star Tower Silokhera, Sector - 30, GURUGRAM Gurgaon HR 1220 IN 1800-120-ECOV. If any customer wants to handover their old product they can reach or call our e-waste recycling partner's Toll Free No. 1800-120-3268 or call us on our Toll free No. 1800-121-1997. Our representative explain them about process of disposal and make them aware about nearest drop point available to drop the e-waste and also give information about incentive that we will offer to them against their end of life product. If any customer wants to handover the material from their door steps we do send either our logistics team or Recycler / Dismantler team to collect the items and channelize the same to our e-waste partner plant for final processing.

## **Instructions:**

### **Do's:**

- Always look for information on the catalog with your product for end-of-life equipment handling.
- Ensure that only Authorized Recyclers repair and handle your electronic products.
- Always call our E-waste Authorized Collection Centres / points to dispose products that have reached end-of life.
- Always drop your used electronic products, batteries or any accessories when they reach the end of their life at your nearest Authorized E-Waste Collection Centres / Points.
- Always disconnect the battery from product, and ensure any glass surface is protected against breakage.



**Don'ts:**

- Do not dismantle your electronic Products on your own.
- Do not throw electronics in bins having "Do not Dispose" sign.
- Do not give e-waste to informal (Kabbadi) and unorganized sectors like Local Scrap Dealer/Rag Pickers.

**Zebronics India Pvt. Ltd.,**

ISO 9001:2015 Certified Company

Helpline No. : 044 4000 0004

E-mail : enquiry@zebronics.com

**[www.zebronics.com](http://www.zebronics.com)**

