dawg

BANGER 420



USER MANUAL

www.dawgflex.com

Yo daWg....

Thank you for purchasing the **"BANGER 420"** Portable Speaker. Please read the user manual carefully before operation and save this user manual for further reference.

Note:

- *Charge the Speaker fully before use.*
- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid the Self-disassembly of the products or it results in voiding the product's warranty.*
- *Please charge the product with power adapter output rating voltage. Avoid using the Speaker while charging.*

To know more about Terms and conditions for warranty policy, please visit.

https://dawgflex.com/pages/warranty-policy

Caution:

Listening at high volumes can cause hearing impairment. Please limit your usage at high volume.

FEATURES:

- 350W RMS
- Dual Woofer & Tweeter Drivers
- Quad-Modal Connection
- Sealed with Passive Radiators
- Double Up for Stereo Vibes (TWS)
- 5H* Nonstop Beats at 50% Vol
- 3H 30 Min* Nonstop Beats at 70% Vol
- 2H 30 Min* Nonstop Beats at 100% Vol
- Media | Volume control
- Multi-Mode Lighting (RGB + Flash)
- Calm & Beast EQ Modes
- Carry Strap | Handle
- Fabric Finish
- 35W Rapid Charging
- IPX5
- Rechargeable Wireless Mic

TECH FLEX:

Model Name	: W-Banger 420
Product Type	: Portable Speaker
Input Connectivity	: BT | USB | mSD | AUX
BT Version	: v5.3
TWS Function	: Yes
Output Power	: 350W (RMS)
Max Supported Memory Size	: 32GB (USB/mSD)

Lighting Modes	
RGB LED	: 3 Modes
Flasher LED	: 3 Modes
Charging Type	: USB Type C
Charging Time	: 4h
Playback Time	: 5H* at 50% Vol 3H 30 Min* at 70% Vol 2H 30 Min* at 100% Vol
Product Dimension	: 49 x 17 x 24 cm (W x D x H)
Net Weight	: 5.7 kg

**Playback Condition Depends on Music vibes and LED OFF.*

INSIDE THE BOX:




Portable Speaker
x 1 U



Wirless Mic
x 1 U



AUX Cable
x 1 U



Type C Cable
x 1 U




Carry Strap
x 1 U



QR Code Guide
x 1 U

BUTTON & PORT DESCRIPTION:

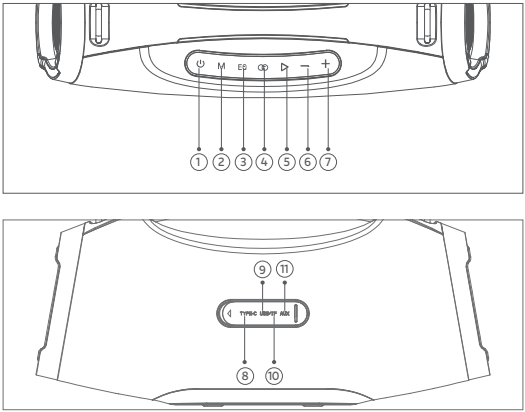

1. Power Button:

- Hold the Power Button for 3 sec to turn ON\OFF the device.
- Single-Press the Power Button to control the Flasher LED.
- Double-Press the Power Button to control the RGB LED.

2. Mode Button:

- The Mode button can be pressed to switch between BT | USB | mSD | AUX Modes.
- During BT mode, press the Mode button for 3 seconds for BT disconnection.

3. EQ Mode:

- Single-Press to switch the EQ mode: outdoor (default) - indoor.

4. Microphone / TWS:

Double Up for Stereo Vibes ( )

- With the speaker turned on, double-click the button to enter or exit TWS mode.
- Turn On both **"daWg Banger 420"** and make sure they are not paired with any other device.
- After a few seconds both speakers will be connected successfully.
- Once two speakers are connected you will hear a tone, now search for a nearby BT device in your mobile phone or other source device and tap on BT name **"daWg Banger 420"** to connect.
- TWS mode LED Light
  - TWS Mode: Flashing Yellow light.
  - TWS Connected: Yellow light remains ON.
  - TWS Disconnected: Yellow light remains OFF.

Microphone Control

- Tap the button to toggle Karaoke Mode ON/OFF. Once you're in Karaoke Mode, just power up the mic and it'll auto-link to the speaker.

5. Play/Pause:

- Single-press the Play/Pause button to play or pause audio playback on the speaker.


6. V- Button:

- Single-Press the V- Button to decrease the volume
- Long-Press the V- Button to Previous track

7. V+ Button:

- Single-Press the V+ Button to Increase the volume.
- Long-Press the V+ Button to next track.

MIC:

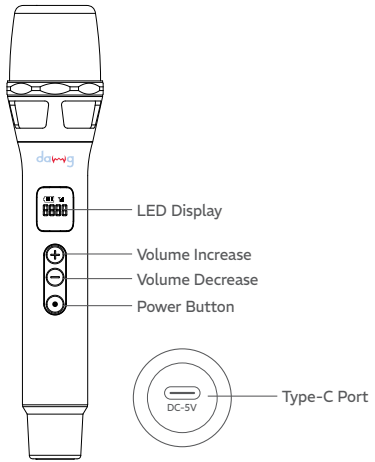

GENERAL (MIC) INSTRUCTIONS:

Power ON/OFF:

- Press and hold the power button to turn ON/OFF the speaker.

Volume Control:

- Single press to increase or decrease the volume.

Bluetooth Mode:

- Switch the speaker to BT mode, Scan for nearby BT devices. Tap on **"daWg Banger 420"** to connect.
- Bluetooth mode LED Light
  - Bluetooth Mode: Flashing Blue light
  - Bluetooth Connected: Blue light remains ON.
  - Bluetooth Disconnected: Flashing Blue light.

AUX Mode:

- Connect the AUX cable to an external audio source. The speaker will automatically switch to AUX mode and play audio from the connected device.

mSD Port:

- Insert the microSD card to instantly play the audio files stored on it.

USB Port:

- Insert the USB Drive to instantly play the audio files stored on it.

Charging Port:

- Before using the **BANGER 420** for the first time, please charge it for at least 2 hours.
- When the battery level falls low, you will hear a low battery tone.
- The red LED will indicate that the speaker is charging. Once fully charged, the LED will go OFF.


STAY BOLD
STAY BOSS
Let's Flex