dawg



BANGER 50

USER MANUAL

www.dawgflex.com

Yo daWg....

Thank you for purchasing the **"BANGER 50"** Portable Speaker. Please read the user manual carefully before operation and save this user manual for further reference.

Note:

- *Charge the Speaker fully before use.*
- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid the Self-disassembly of the products or it results in voiding the product's warranty.*
- *Please charge the product with power adapter output rating voltage. Avoid using the Speaker while charging.*

To know more about Terms and conditions for warranty policy, please visit.

https://dawgflex.com/pages/warranty-policy

Caution:

Listening at high volumes can cause hearing impairment. Please limit your usage at high volume.

FEATURES:


- 18W RMS
- Racetrack Driver
- Tri-Modal Connection
- Twin Passive Radiators
- Double Up for Stereo Vibes (TWS)
- 9H* Nonstop Beats at 70% Vol
- 3H* Nonstop Beats at 100% Vol
- Fabric Finish
- Media | Volume control
- Carry Ring
- IPX5

TECH FLEX:


Model Name	: W-Banger 50
Product Type	: Portable Speaker
Input Connectivity	: BT | USB | mSD
BT Version	: v5.3
TWS Function	: Yes
Output Power	: 18W (RMS)
Max Supported Memory Size	: 32GB (USB/mSD)
Charging Type	: USB Type C
Charging Time	: 3h
Playback Time	: 9H* at 70% Vol 3H* at 100% Vol
Product Dimension	: 8.6 x 8.2 x 14.5 cm (WxDxH)
Net Weight	: 0.47 kg

**Playback Condition Depends on Music vibes.*

INSIDE THE BOX:

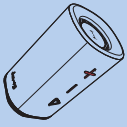

Portable Speaker
x 1 U




Type C Cable
x 1 U



QR Code Guide
x 1 U

BUTTON & PORT DESCRIPTION:

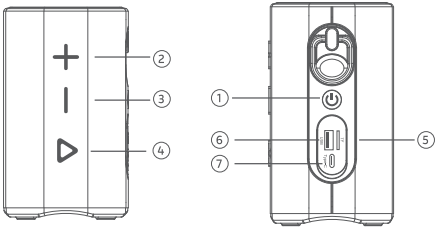

1. " ⏻ " Button:

- Hold the Power Button for 3 sec to turn ON/OFF the device.
- TWS Mode - Double click to turn ON/OFF (When not connected in BT Mode).

2. " + " Button:

- Single press "+" button: Increase Volume.
- Hold "+" button for 2 sec for Next Track.

3. " — " Button:

- Single press "-" button: Decrease Volume.
- Hold "-" button for 2 sec for Previous Track.

4. " ▶ " Button:

- Play/Pause - Single Click
- Answer/Hangup - Single Click
- Reject Call - Long Press
- Call Back - Double Click

5. mSD Port:

- Insert the microSD card to instantly play the audio files stored on it.

6. USB Port:

- Insert the USB Drive to instantly play the audio files stored on it.

7. Charging Port:

- Before using the **BANGER 50** for the first time, please charge it for at least 2 hours.
- When the battery level falls low, you will hear a low battery tone.
- The red LED will indicate that the speaker is

charging. Once fully charged, the LED will go OFF.

- Please charge the product with power adaptor output rated voltage DC 5V.

Bluetooth Mode:

- Switch the speaker to BT mode, Scan for nearby BT devices. Tap on **"daWg Banger 50"** to connect.
- Bluetooth mode LED Light
  - Bluetooth Mode: Flashing Blue light
  - Bluetooth Connected: Blue light remains ON.
  - Bluetooth Disconnected: Flashing Blue light.

Double Up for Stereo Vibes (TWS)

- Turn ON both **"daWg Banger 50"** and make sure they are not paired with any other device.
- Double press the Power button in any one of the speakers to initiate TWS pairing.
- After a few seconds both speakers will be connected successfully.
- Once two speakers are connected you will hear a tone, now search for a nearby BT device in your mobile phone or other source device and tap on BT name **"daWg Banger 50"** to connect.

- TWS Mode LED Light
  - TWS Mode: Flashing Orange light.
  - TWS Connected: Orange light remains ON.
  - TWS Disconnected: Flashing Blue light.

STAY BOLD
STAY BOSS

Let's Flex