ZEBRONICS

Wireless Earbuds

ZEB Dh'vny E21

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-DH'VNY E21** Wireless Earbuds. Please read this user manual carefully before operation & save this user manual for further reference.

Note:
- *Avoid the use of this product at the high temperature and high humidity environment.*
- *Avoid self-disassembly of product or it will result in the failure of warranty.*
- *Please charge the product with DC 5V power adapter.*
- *There isn't no specific way to turn ON & OFF ENC. It automatically enables during calls.*

https://zebronics.com/pages/warranty-policy

Caution:
Listening at high volumes can cause hearing impairment. Please limit your usage time at high volumes.

Features:
- Up to 35h* Backup
- Rapid Charging (10min charge for 75min* use)
- Active Noise Cancellation
- Gaming Mode (Low Latency)
- Environmental Noise Cancellation (ENC)
- Transparency Mode
- Dual EQ Modes
- Built-in Quad MIC
- 12mm Drivers
- Flash Connect

- Splash proof
- BT v5.4
- Call Function
- Voice Assistant support
- Touch Controls
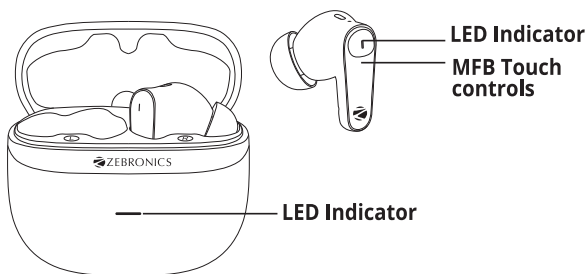- Type-C Charging

Specifications:

Model No.	: ZEB-PODS S2
BT Version	: 5.4
Supported BT Profile	: AVCTP / HFP/ A2DP / AVRCP / AVDTP
Drive Size	: 12mm
Speaker Impedance	: 32Ω±15%
Playback Time	: 7h*
Charging Time	
Earphone	: 1.5h
Case	: 1.5h
Talk Time	: 6h*
Standby Time	: 180 Days
Case Dimension	
(W x D x H)	: 6 x 2.8 x 5.6 cm
Net. Weight	: 36.7g

* at 70% Volume(ANC OFF)

Package Content:

Earbuds	: 2 U
Charging case	: 1 U
Ear tips	: 4 U
Charging cable	: 1 U
QR Code Guide	: 1 U

Product Representation:

Usage Instructions:

BT Pairing Instructions:

Step 1: The earbuds will turn ON once they are taken out from the case.

Step 2: The earbuds will pair with each other within 5 secs.

Step 3: Now open the phone's BT settings and pair the earbuds by clicking on the **'ZEB-DH'VNY E21'.**

Music Playback:

• Single Tap the MFB once on either side to Play/Pause the track.

• Double tap on Left side to Skip to the Previous song.

• Double tap on Right side to Skip to the Next song.

• Triple tap the MFB button on left/right side of the earbud to decrease/increase Volume

During Calls:

While receiving a call...

• Single tap the MFB on either side of the earbuds to Answer / End the call.
• Press & Hold the MFB on either of the earbuds to Reject the call.

Activating the Voice Assistant:

Press and hold the MFB button on the left side for 3 sec to wake up the Voice assistance from your smartphone.

Activating Gaming Mode:

• Tap the MFB button four times on the **Left** side to trigger Gaming Mode.
• Tap four times again on the **Left** side MFB to revert to Music Mode.

EQ Modes:

• By default, the EQ mode will be Equalizer Mode Once four tap the right earbud, it will change to SoundMonster mode.
• Then Four tap the right earbud once again to switch back to the default EQ mode.

Turning OFF/ON (Manual Method):

• Press and hold the MFB on both sides for 5 seconds to turn OFF the TWS.

• Do the same to turn ON the TWS.

ANC Mode (Active Noise Cancellation):

Press and hold the left earbud of the TWS to switch modes:

• MODE 1 ▸▸ Transparency Mode

• MODE 2 ▸▸ ANC ON

• MODE 3 ▸▸ ANC OFF

Charging Instructions:

Charging the Case:

Connect the Type-C cable to the charging port of the charging case and connect the other end of the cable to the DC 5V adapter.

The charging case Green LED will blink, and once it's fully charged the Green LED will glow, indicating that the charging case is full.

Charging the Earbuds:

Put the earbuds in the respective charging slot of the charging case. Once placed in the charging case, the earbuds will charge automatically.