ZEBRONICS

Portable BT Speaker

ZEB PIXIE

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-PIXIE** Portable BT Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:
- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in voiding the product's Warranty.*
- *To know more about Terms and conditions for warranty policy, please visit*

   https://zebronics.com/pages/warranty-policy

Features

Wireless BT v5.3
mSD Input
Call Function
Media / Volume Control
Built-in Rechargeable Battery
TWS Function
Compact Design
Carry Loop

Specifications

Output Power (RMS)	: 5W
BT Version	: v5.3
Driver Size	: 3.6 cm
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-18kHz
S/N Ratio	: ≥70dB

Max Supported Memory Size	: 32GB (mSD)
Supported Audio Formats	: MP3
Charging Time	: 1.5h
Playback Time	: 7h*
Product Dimension	: 5 x 4.5 cm (Dia x H)
Net. Weight	: 70g

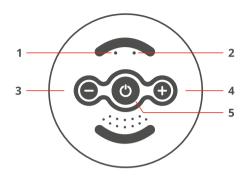*at 50% volume level*

Package Contents

Speaker	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U

Charging instruction:

• Use the provided Type-C charging cable to any DC 5V rated USB adapter or port.

Product Details

1 LED Indicator
2 Microphone
3 Previous | Volume Decrease
4 Next | Volume Increase | TWS Function
5 Power On/Off | Play/Pause | Redial | Mode

Usage Instruction:
BT Pairing Instructions:

• Press and hold the Power button for 2-3 seconds to turn ON the speaker

• The speaker automatically enters into BT pairing mode.

• Turn ON the BT in your mobile device settings & search for the BT name "**ZEB-PIXIE**"

• Once the BT name is visible in your mobile settings, tap on it and click pair to connect.

Button Function:

• Press and hold the Power button for 2 seconds to Power On/Off.

- Short press the Power button to accept incoming call or End the on going call.
- Short press the Power button thrice to initiate Redial function.
- Double press the Power button to switch between BT & mSD modes.
- Short press the (+) button to next track.
- Short press the (-) button to previous track.
- Press and hold the (+) button to increase the volume.
- Press and hold the (-) button to decrease the volume.
- Short press the (+) button twice to enable TWS function.

Note : TWS function needs two Zeb-Pixie. The above functions are the same for mSD.

LED Functions:
- Red light glows - Charging
- Red light turns off - Fully charged
- Blue light blinks constant - BT discovery mode
- Blue light glows constant - BT paired successfully
- Blue light blinks - Power On
- Blue light blinks - Power Off