ZEBRONICS

Portable BT speaker

ZEB SONIC POD 15

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-SONIC POD 15** (Portable BT Speaker). Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at the high temperature and high humidity environment.*
- *Avoid the self-disassembly of the products or it results in the voiding the product's Warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit*

https://zebronics.com/pages/warranty-policy

Features:

- BT v5.4 | USB | mSD
- 9 RGB Modes
- TWS function
- Media / Volume control
- Upto 10h* backup
- Carry Strap
- 5W RMS
- Passive radiator
- Type-C Charging
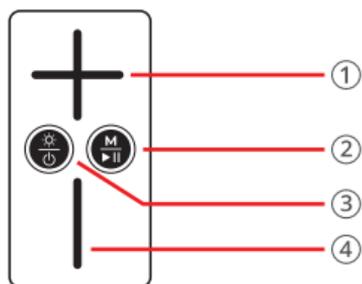- Built-in Rechargeable battery

Specifications:

Output Power (RMS)	: 5W
BT Version	: v5.4
Driver Size	: 5.2cm
Speaker Impedance	: 3Ω
Frequency Response	: 100Hz-20kHz
S/N Ratio	: ≥75dB
Max Supported USB/mSD memory size	: 32GB
Supported Audio formats	: MP3
Charging time	: 4h
Playback time	: 10h*
Product Dimension (W x D x H)	: 7.6 x 8.1 x 9.5cm
Net. Weight	: 294g

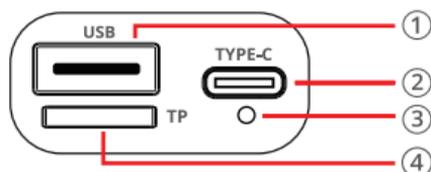*at 100% Volume (LED off)*

Package Contents:

Speaker	: 1 U
Charging cable	: 1 U
QR Code Guide	: 1 U

Button & Port Description:

① Volume Increase Button
② Mode/Play-Pause Button
③ Power/LED Button
④ Volume Decrease Button

① USB Port
② Type-C Charging Port
③ Led Indicator
④ mSD Port

Instruction for Use:
Button Function:

1. Turn On / Off the Speaker by long pressing the Power / LED Button. Short pressing this button will change between different LED modes of the speaker.

2. To increase the volume of the speaker, long press the Volume Increase Button. Short press this button to change to next tracks/channels.

3.To change between different input modes of the speaker, long press the Mode / Play-Pause Button. Short press this button to play/pause the tracks.

4.To decrease the volume of the speaker, long press the Volume Decrease Button. Short press this button to change to previous tracks/channels.

Pairing with the BT speaker:

1.Power ON the Speaker and you will hear the indication for the BT mode.

2.Switch ON BT on your phone or tablet and search for the nearby BT devices.

3.Search for the BT name **"ZEB-Sonic Pod 15"** and tap to connect it.

Micro SD / USB Mode:

Connect the micro SD card / USB drive to the respective ports of the **ZEB-SONIC POD 15** and the speaker will automatically start playing from the micro SD card / USB drive.

FM Radio:

- Once the speaker is turned ON, Please switch the speaker to FM mode using the Mode button.
- Once the speaker is in FM mode then single press the Mode / Play-Pause Button to scan between different channels to stop scanning once again press this button.

TWS Function:
- Turn on two **ZEB-SONIC POD 15** speakers you want to pair.
- Double press the **"Mode / Play-Pause Button"** button on any one speaker to activate TWS mode.
- After a few seconds, both the speakers will be connected successfully.
- Now search for a nearby BT device from your mobile and tap on the BT name **"ZEB-Sonic Pod 15"** to connect.
- To exit TWS mode, long press the "MODE" button again.

Note: *Requires two ZEB-Sonic Pod 15 speakers for TWS feature.*

Charging the Speaker:
- Connect the charging cable to the Type-C Charging Port of the speaker and insert the other end into a DC 5V charging power source/adapter.
- Red LED glows indicating that the battery is being charged.