ZEBRONICS

Smart LED Projector

PixaPlay®15

User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-Pixaplay 15 Smart LED Projector**. Please read the user manual carefully before usage & save it for future reference.

Note :

•*To provide a stable power supply, kindly use the cable provided with the product and connect to a AC 100-240V, 50/60Hz power source.*

•*Avoid the self-disassembly of the product as it results in the failure of Warranty.*

•*Avoid looking directly at the projector lens while it is active.*

•*Make sure that the projector's air vents are not blocked while in use. The device must be kept in a well ventilated surrounding for proper functioning.*

•*It is recommended to power OFF the projector after a continuous usage of 6 hours.*

•*Place the projector away from water or other liquids. Avoid water accumulation and ensure good ventilation.*

•*In case of enquiry regarding the projector, email us at enquiry@zebronics.com or contact us at 044 4000 0004.*

Features:
- Home Theatre Projectors for Movies, TV & Gaming etc.
- Projector comes with AV IN, AUX OUT, USBx2, HDMI
- Built in Speaker
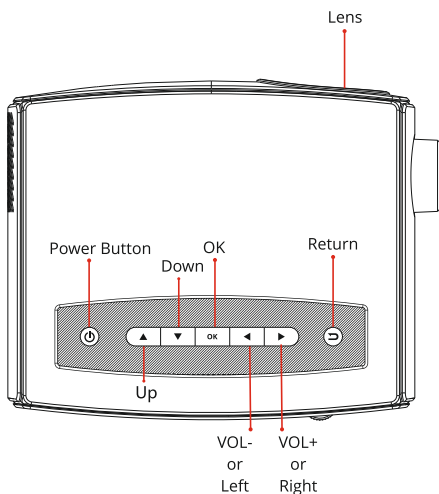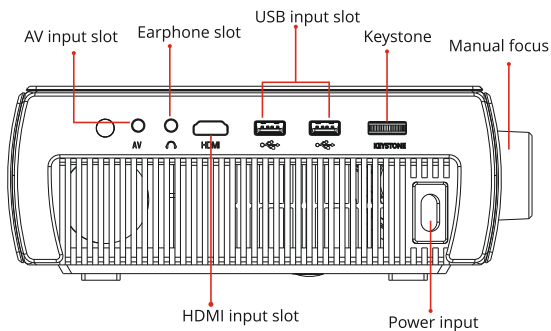- Wide Compatibility
- Remote Control

Specification:

Screen size	: 106-457cm
Native Resolution	: 1920 x 1080 FHD
Max. Supported Resolution	: 1080P (Max.)
RAM	: 1 GB
Core Processor	: Quad Core Processor
Storage (ROM)	: 8 GB
Android Version	: 9.0
WI-Fi Connectivity	: Dual Band Connectivity (2.4GHz & 5GHz)
Bluetooth Version	: v5.1
Display Technology	: LED
Lifespan	: 30,000H
Brightness	: 5500 lumens
Contrast ratio	: 1000:1
Projection Distance	: 1.5m - 5.6m
Port Interface	: AV IN, AUX OUT, USB x 2, HDMI
Video file format	: 3GP, ASF, AVI, NTSC, PAL, FLV, MP4, MPEG-1, MPEG-2, MPEG-4, H264,

M4V, MKV, MOV, VOB

Input Voltage	: AC 100-240V, 50/60Hz
Product Dimension (W x D x H)	: 24 x 18.5 x 9 cm
Net. weight	: 1.5 kg

Package Contents :

Projector	: 1 U
Remote Control	: 1 U
Power Cord	: 1 U
AV Cable	: 1 U
Support Base	: 1 U
HDMI Cable	: 1 U
QR Code Guide	: 1 U

Product Description
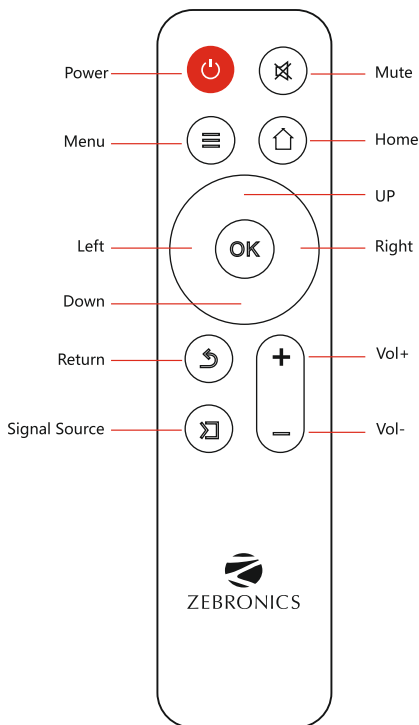
AV input slot

Earphone slot

USB input slot

Keystone

Manual focus

AV

HDMI

KEYSTONE

HDMI input slot

Power input

Lens

Power Button

OK

Return

Down

Up

OK

VOL-
or
Left

VOL+
or
Right

Remote Control (Type - 1)

Power — [power icon]
Mute — [mute icon]
Menu — [menu icon]
Home — [home icon]
UP
Left — OK — Right
Down
Return — [return icon]
Vol+ — +
Signal Source — [signal source icon]
Vol- — −

ZEBRONICS

NOTE :

1. To avoid power shortage, please do not mix and use the old and new battery.

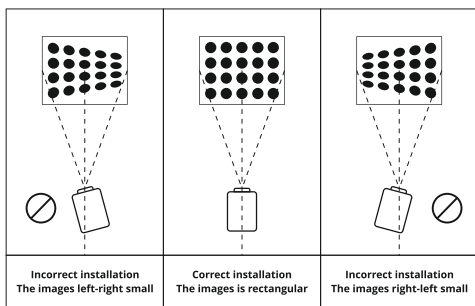2. To avoid battery leakage corrosion, if do not use remote control for a long time, please take the battery out.

Remote Control (Type - 2)
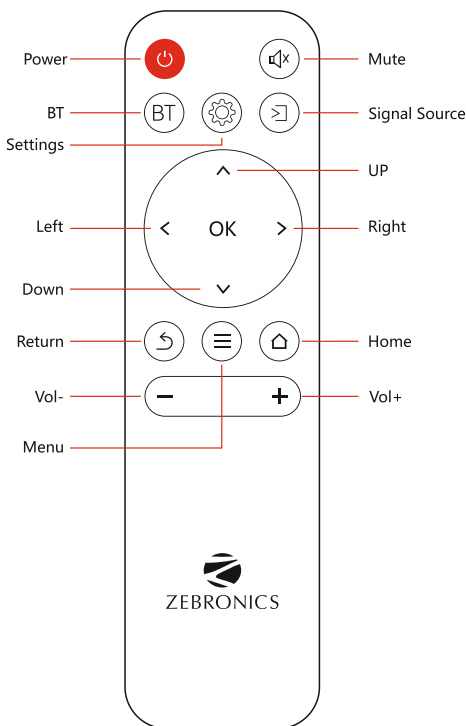
Power — Power button

Mute — Mute

BT — BT

Settings — Settings

Signal Source — Signal Source

UP — UP

Left — Left

OK

Right — Right

Down — Down

Return — Return

Home — Home

Vol- — Vol-

Vol+ — Vol+

Menu — Menu

ZEBRONICS

NOTE :

1. To avoid power shortage, please do not mix and use the old and new battery.

2. To avoid battery leakage corrosion, if do not use remote control for a long time, please take the battery out.

Projector Interface

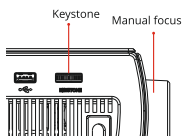AV   HDMI   KEYSTONE

① AV

② ⌂

③ HDMI

④ USB
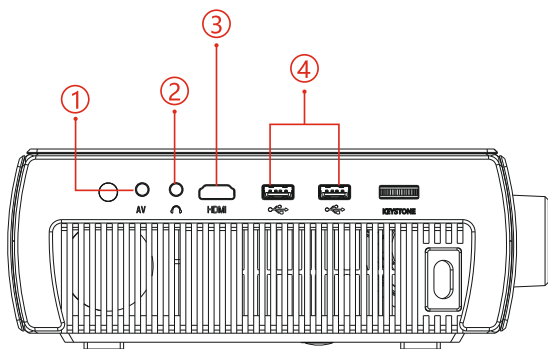
Setting Up the Projector

1. Connect the power cord to the projector and turn it ON, You'll be indicated with the blue color LED on the power button.

2. Before turning ON, make sure to place it in a flat surface for a proper projection then Press the power button / turn it on by using the remote.

3. Align the projector as shown in the image below to ensure proper projection.

Incorrect installation The images left-right small	Correct installation The images is rectangular	Incorrect installation The images right-left small

Focus & Keystone Adjustment

Keystone   Manual focus

Once the projector turns ON, wait till it gets loaded. After boot-up adjust the focus knob in the projector until the images/video gets stabilized.

Keystone Adjustment

If the projection of an image/video on the either edges are not evenly set, then use the keystone adjustment to correct the image to have even top and Bottom edges. Refer to the image above.

Android Home
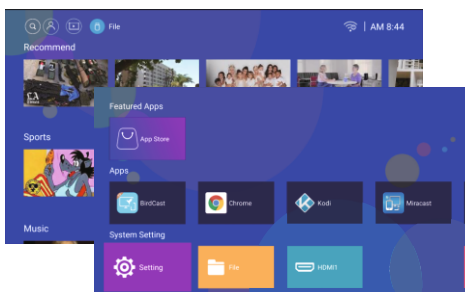
1. Once the projector is turned on you'll be directed to the home screen.
2. Supported External apps can be downloaded from Google Play store.

Basic Settings

Open the homepage, select settings, you can select Wifi settings, Bluetooth settings, system settings, language settings, date settings, application setting, system update, other settings and you can modify related setting options on this projector.
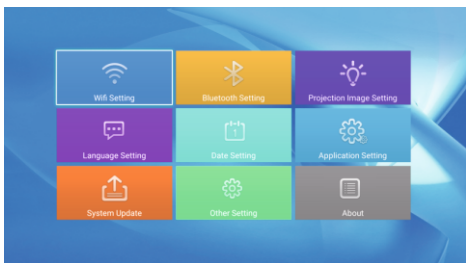
USB Connections
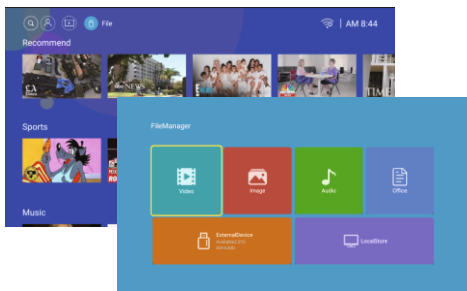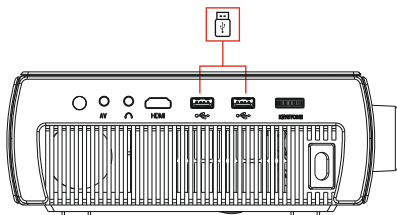
Connect the USB Drive with the content to the projector. You can access the USB drive by either clicking on the USB icon that pops up on the home page or by using the file menu next

to the setting icon. The above mentioned screen will pop-up. You can easily access the media either category wise - videos / photos or from the folder itself and play them.

HDMI & AV Interface
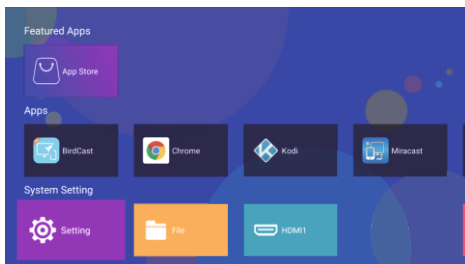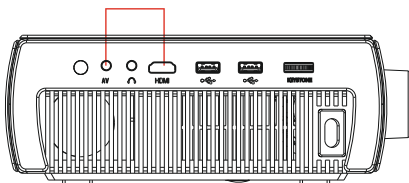
Once the HDMI / AV is connected to the projector, you will need to select the specific signal source as the input. After connected the content played on the source will be streamed on the projector.

Projector distance & size
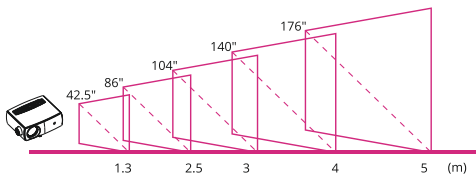
Note:

Due to optical device error of about 3%, the above data is for reference only, Please use actual measurement when installing the device.