ZEBRONICS

ZEB DJ Speaker

SONIC BEAM 100



User Manual

www.zebronics.com

Dear Customer,


Thank you for purchasing **ZEB-SONIC BEAM 100** DJ Speaker. Please read the user manual carefully before usage & save it for future reference.

Note:

- *Avoid the usage of this product at high temperature environments and high-humidity.*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.*
- *Turn off the speaker when the speaker is not in use.*
- *To know more about Terms and conditions for warranty policy, please visit:*


https://zebronics.com/pages/warranty-policy

Warning

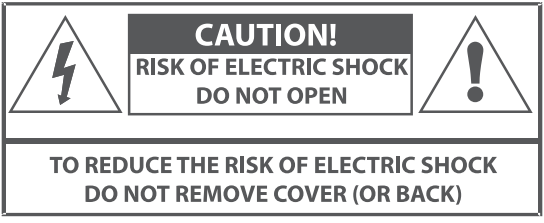

Caution:

- To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. The unit has no user-serviceable parts inside.
- Refer servicing to qualified personnel only. The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.

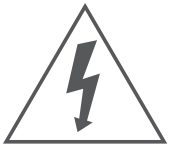



Important! This symbol alerts you to read and observe important warning s and instructions on the unit or in this manual.

1. To prevent possible hearing damage, do not listen at high volume levels for long time periods or a sudden high volume level.



2. Never use the device unsupervised! Switch off the device whenever you are not using it, even if not using it only for a short while.

3. The appliance is not intended to be operated by means of an external timer or separate remote control system.
4. If the power supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
5. Before operating this system, check the voltage of this system to see if it is identical to the voltage of your local power supply.

Preparation for Use

Unpacking and Set Up

- Remove the DJ Speaker from the carton and remove all packing material from the DJ speaker. Save the packing material, if possible, in case the DJ speaker ever needs to be serviced or transported.
- The original carton and packing material is the only safe way to pack your DJ speaker to protect it from damage in transit.
- Remove any descriptive labels or stickers on the front or top of the device's exterior casing. Do not remove any labels or stickers from the back or bottom of the device's exterior casing.
- Place your DJ speaker on a level surface such as a table, desk or shelf, convenient to an AC outlet, out of direct sunlight, and away from sources of excess heat, dirt, dust, moisture, humidity, or vibration.

Important Notes

- *Do not install the product in the following areas:*
- *Places exposed to direct sunlight or close to radiators.*
- *On top of other stereo equipment that radiate too much heat -Blocking ventilation or in a dusty area.*
- *Areas where there is constant vibration.*
- *Humid or moist places.*
- *Do not place near candles or other flames.*
- *Operate the product only as instructed in time, make sure the Party speaker is plugged to power outlet.*
- *For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.*
- *Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside. Refer all servicing to qualified service personnel.*

Features:

- Up to 5h* Backup
- Dual Full range 20.32cm Drivers
- Column HF Drivers
- TWS Function
- 3 EQ Modes
- Dual UHF MIC
- Karaoke Function
- 6.3 mm Microphone Input
- MIC Volume & Echo Controls
- Volume, Bass & Treble controls

- RGB Lights
- BT V5.3 | USB | AUX
- Type-C Charging
- Remote control
- Built-in Battery

Specification:


Driver Size	
Full range	: 20.32cm x 2
Tweeter	: 5.08 cm x 4
Impedance	
Full range	: 4Ω
Tweeter	: 3Ω
Frequency response	: 60Hz-20kHz
S/N Ratio	: ≥75dB
File format support	: MP3
Line input	: 3.5mm
Max supported memory size	: 32GB(USB)
Charging time	: 7h
Playback time	: 5h*
BT name	: ZEB-SONIC BEAM 100
BT version	: v5.3
Product Dimension (W x D x H)	: 28 x 27 x 110 cm
Net.Weight	: 8.9kg

Package contents:

DJ Speaker	: 1U
Column Speaker	: 1U
Wireless Mic	: 2U
Charging Cable	: 1U
Input cable	: 1U
QR Code Guide	: 1U
Remote	: 1U


**at 50% Volume (LED OFF)*

Product Description

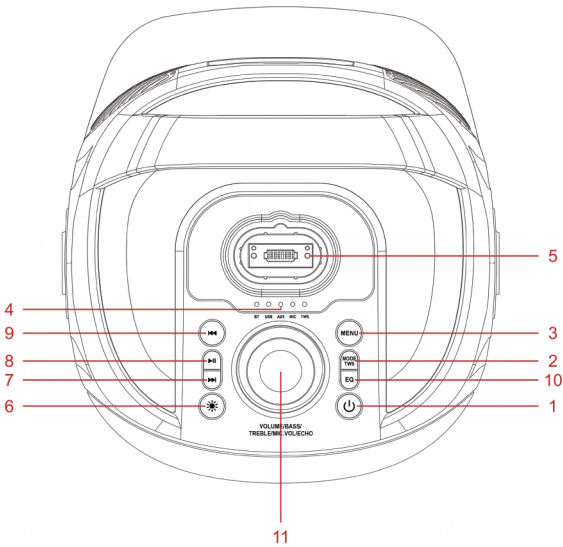


1. Power Button.
2. Mode/TWS Button.
3. Menu Button.
4. Mode LED Indicator.
5. Column HF Driver Dock.
6. RGB Light Button.
7. Next Track Button.
8. Play/Pause Button.
9. Previous Track Button.
10. EQ Button (Indoor / Outdoor mode)
11. Volume Control Knob .

Back Panel Description

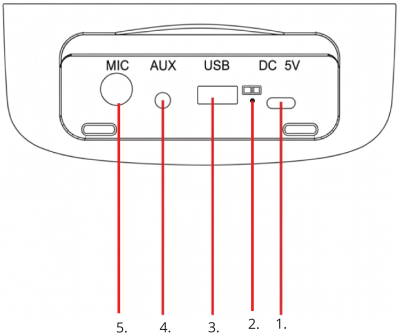

1. Type-C Charging Port
2. Charging Indicator
3. USB Port
4. AUX Port
5. 6.3mm Mic Port

Remote Description

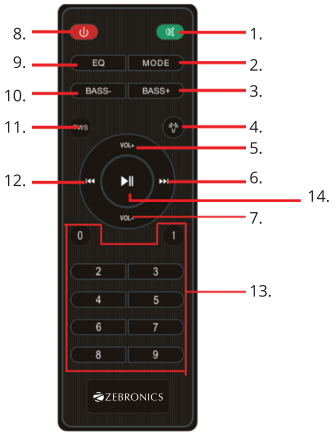

1. Mute
2. Mode Switch
3. Bass Increase
4. RGB Light Button
5. Volume Increase
6. Next Track
7. Volume Decrease
8. Power ON/ Standby Button
9. EQ Presets
10. Bass Decrease
11. TWS Button
12. Previous Track
13. Track Numeric
14. Play/Pause

Instruction to use

- Turn the speaker ON/OFF using the power Button.
- Turn the knob to increase or decrease the volume of MIC/BASS/TREBLE/Mic.Vol/ ECHO.
- Press Play/Pause button to pause the music, press again to resume play. Long , press this button to disconnect the Bluetooth connection.
- Press Previous button to previous track in USB/BT/AUX mode.
- Press Next button to Next track in USB/BT/AUX mode.

- Press Mode/TWS button to switch to BT mode when the speaker is in USB or AUX mode.
- Long press Mode/TWS button to turn on TWS pairing mode.
- Press EQ button to switch between Indoor/Outdoor modes.
- The Menu button allows adjustment of Bass, Treble, Mic Volume, Mic Echo volume..
- Press the Menu button repeatedly to toggle between the available adjustment options.
- By default, the Menu button cycles through Bass and Treble of the Speaker.
- To adjust Mic Volume, Mic Echo, press the Menu button until the Mic Volume, Mic Echo Press RGB Button to toggle between the RGB modes of the Speaker.
- Press RGB Button to toggle between the RGB modes of the Speaker.

Pairing with the Bluetooth speaker:

- Power ON the Speaker and you will hear the indication tone for the BT mode.
- Turn ON BT on your phone or tablet and Search for the BT name "**ZEB-SONIC BEAM 100**" and tap to connect it

USB Mode:

- Once the speaker is ON, insert the USB drive to the respective port of the "ZEB-SONIC BEAM 100" and the speaker will automatically detect the track from the USB drive and play.
- Press Prev/Next button to control the media.
- Use the Master volume control to control the volume of the speaker.

TWS Function:

- Switch ON two **"ZEB- SONIC BEAM 100"** speakers that are to be paired.
- Long Press the Mode/TWS Button to enable TWS Feature in any one speaker.
- After a few seconds, both the speakers will be connected successfully.
- Now, Search for nearby BT device in the source device and tap on the BT name **"ZEB- SONIC BEAM 100"** to connect.

AUX-IN

- The speaker can be connected to an audio source using a 3.5 to 3.5mm cable.
- Connect one end of the cable to the AUX-In port on the speaker and the other end to an audio source.
- The audio from the source can be played through the speaker.

Charging the Speaker:

- Use a DC 5V 3A adapter for charging the speaker.
- RED LED will be ON while charging.
- Once the speaker is fully charged, the RED LED will be OFF