ZEBRONICS

Portable BT Speaker

ZEB PARTY Fyre 150



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing the **ZEB-PARTY FYRE 150** Portable BT Speaker. Please read the user manual carefully before usage & save it for further reference.

Note:

- *Avoid the usage of this product at high-temperature and high-humidity environments.*
- *Avoid the self-disassembling of the product or it will result in voiding the Product's warranty.*

Caution: *There is a risk of explosion if the product is disposed in the fire*

To know more about Terms and conditions for warranty policy, please visit

https://zebronics.com/pages/warranty-policy

Features:

- Up to 7h* backup
- Dual 16.51 cm Full Range Drivers
- TWS Function
- Wireless Pro Mic
- Wired Mic Included
- BT v6.0 | USB / mSD | AUX
- 7 DJ BGM Effects
- Karaoke Maker
- MIC Recording
- 6.3mm Mic Input
- 6.3mm Guitar Input


- Music & Mic Controls
- RGB Modes
- Carry Strap
- Mobile Holder
- LED Display
- Built-in Battery
- Remote Control

Specifications:

Driver Size	
Full Range / Tweeter	: 16.51cm x 2 / 3.8cm
Speaker Impedance	
Full Range / Tweeter	: 4Ω / 7.5Ω
Frequency Response	: 60Hz-20kHz
S/N Ratio	: ≥85dB
File format support (USB / mSD)	: MP3
Line input	: 3.5mm
Max supported USB/ mSD memory size	: 32GB
Charging Time	: 5.5h
Playback Time	: 7h*
BT name	: ZEB-PartyFyre 150
BT version	: v6.0
Product Dimension	: 26.9 x 24.4 x 59.6 cm (W x D x H)
Net. Weight	: 5.8kg


** (LED OFF)*

Product description:

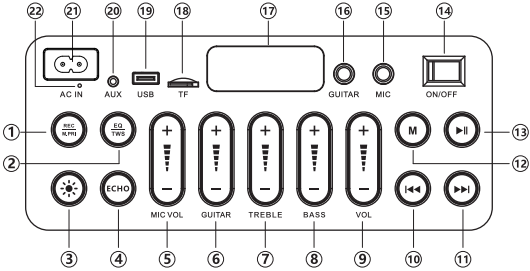

1. Record / Mic Priority Button
2. EQ/TWS Button
3. RGB Mode Button
4. Echo Button
5. Mic Volume Control Button
6. Guitar Volume Control Button
7. Treble Control Button
8. Bass Control Button
9. Master Volume Control Button
10. Previous Track Button
11. Next Track Button
12. Mode Button
13. Play/ Pause Button
14. Power Switch
15. 6.3mm Mic Input
16. 6.3mm Guitar Input
17. LED Display
18. mSD Card Slot
19. USB Port
20. AUX Port
21. AC Power Input
22. Charging Indicator

Remote :

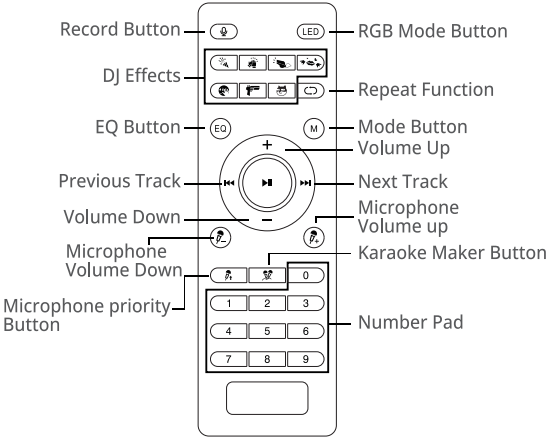

Wireless Mic button Description :



General Instructions:

BT Mode:

Switch on the speaker to BT mode, Scan for nearby BT devices in your device. Tap on **"ZEB-Party Fyre 150"** to connect.

USB/mSD Mode:

Insert the USB Drive / mSD Card to the Speaker. The speaker will detect the USB/mSD Card and the audio files from the drive / card will be played automatically.

AUX-IN:

The speaker can be connected to an audio device using a 3.5mm cable. Connect the one end of the cable to the speaker & connect the other end of the cable to an audio source. The songs from the audio source can be heard through the speaker.

TWS Connectivity:

1. Turn on both **ZEB-PARTY FYRE 150** speakers and select BT Input Mode on both the speakers.
2. Long Press the EQ/TWS button to Enable TWS Function
3. You will hear a tone which indicates the TWS mode is activated between both speakers.
4. Open BT Settings on your device and search for BT name **ZEB-PARTYFYRE 150** then tap to connect on it.

Note: *Requires two speakers for TWS feature*

Note :

To exit TWS mode, press and hold the EQ/TWS button in any one of the speakers.

Charging the Speaker :

1. Connect the pre-included Power Cord to the speaker & connect the other end to 220V-240V AC power Socket.
2. The red LED will be ON while charging. After full charge the Red LED will go OFF and Green LED will glow..