



Desktop Monitor Stand
ZEB DMS 200



User Manual

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-DMS200** Desktop Monitor Stand. Please read the user manual carefully before usage & save it for future reference.

Note:

Read the entire instruction manual before you start installation and assembly.

Caution:

- Carefully open the carton, remove contents and lay out on cardboard or other protective surface to avoid damage.
- Check package contents against the Supplied Parts List in the next page to assure that all components were received. Do not use damaged or defective parts.
- Carefully read all instructions before attempting installation.

Important Safety Information :

- Install and operate this device with care. Please read this instruction before installation, and carefully follow all instructions contained herein. Use proper safety equipment during installation.
- Please call a qualified installation contractor for help if you don't understand these directions or have any doubts about the safety of the installation.

- Do not use this product for any purpose or in any configuration not explicitly specified in this instruction. We hereby disclaim any and all liability for injury or damage arising from incorrect assembly, incorrect mounting, or incorrect use of this product.

Features :

- 43.18cm (17) - 81.28cm (32) Monitor
- 75x75mm / 100x100mm VESA Mount
- Mechanical Arm Stand
- C-Clamp & Grommet Support
- 360° Rotation , Swivel $\pm 90^\circ$ & Tilting $\pm 5^\circ$
- Max Load Weight upto 7kg
- Cable Management
- Single Monitor Desk Mount
- Rust-Proof

Specifications :

Adjustable Heights	: 10-400mm
Arm Extension Distance	: 120-420mm
Arm Mechanism	: Mechanical Arm
Cable routing	: Clip
VESA	: 75x75 / 100 x 100mm
Suitable Monitor Sizes	: 43.18cm - 81.28cm
Max Load Weight	: 7kg
Rotation	: 360°
Swivel	: $\pm 90^\circ$
Tilting	: $\pm 5^\circ$

Material : Metal and Matte Finish

Product Dimensions

(W x D x H) : 47.5 x 12 x 41.3 cm

Net Weight : 1.67 kg

Package Contents:


Desktop


Monitor Stand : 1 U

Mounting Kit : 1 U

QR Code Guide : 1 U

Mounting & Assembling Components :

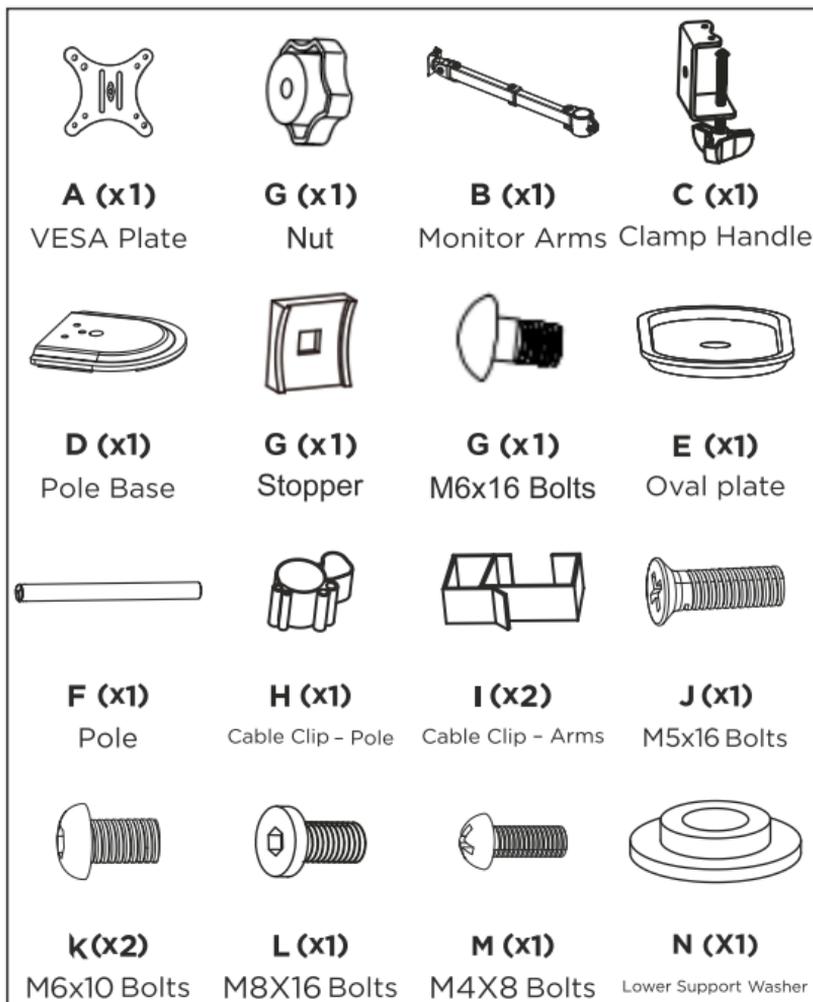

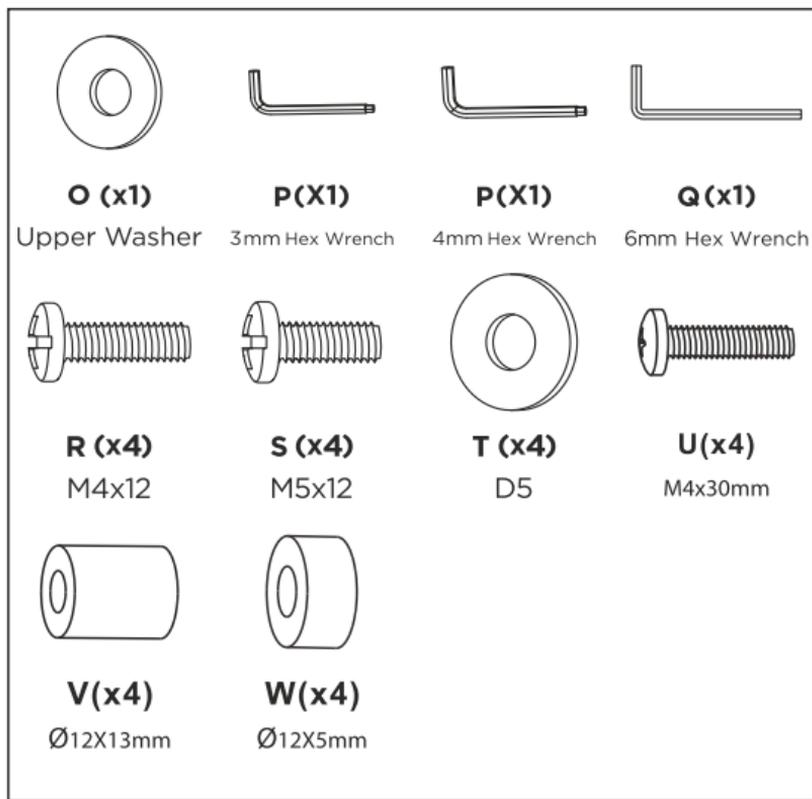


Caution :

This monitor desktop mount must be securely attached to the horizontal desk. If the mount is not properly installed it may fall, resulting in possible injury and/or damage.


Instructions for Assembling :

1.C - Clamp Installation :


- Attach the Base(D-part) to the pole(F-part) using the Bolt(J-part) through the recessed hole in the Base shown below, ensure the larger bolt hole in the center is aligned with the center of the pole. Tighten bolt (J-part) until secure.

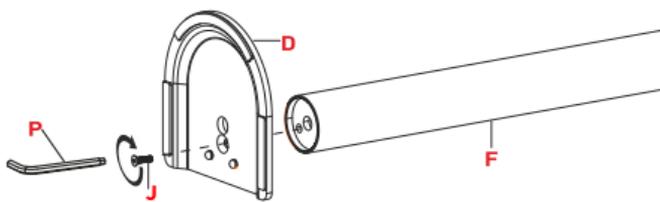

- Install the Bolt (L-part) through the remaining hole on the base. Tighten bolt (L-part) until secure.

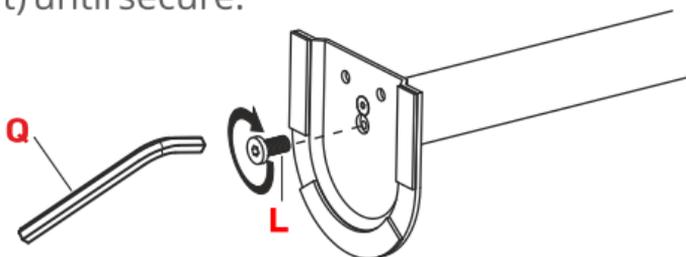


- For desks with a thickness of 10.16mm - 45.72mm the clamp handle (C-Part) in the original orientation as shown so that short end of the bracket faces down alongside the handle. Place the lower support washer (N-part) on the end of the clamp bolt followed by the Oval Plate (E-part) then Upper washer (O-part) and secure it in place using the Bolt (M-part).

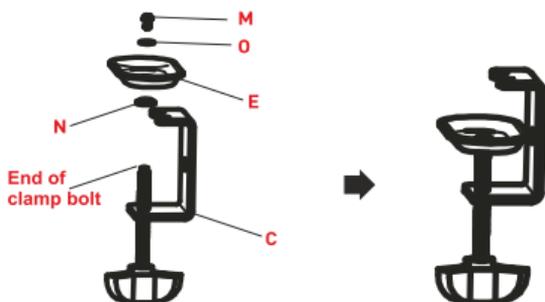


Note : Make sure both N (bottom) & O (top) washers are installed as per the instructions above.


- Connect the clamp handle (C-part) to the Pole Base as shown using Bolt (K-part). Partially Install the 2 bolt (K-part) leaving a gap of approximately 5mm between the bracket and base of the screw.

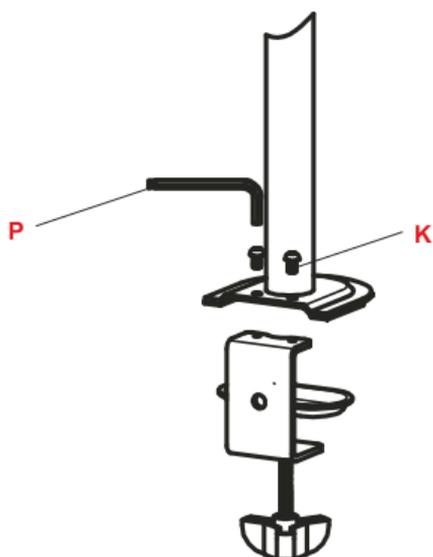


- Place the mount over the edge of the desk in the position desired and tighten the hand knob until the clamp is tight against the underside of the table.

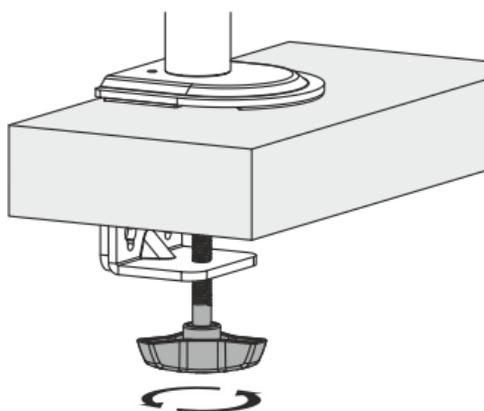


2. Grommet Mount Installation :

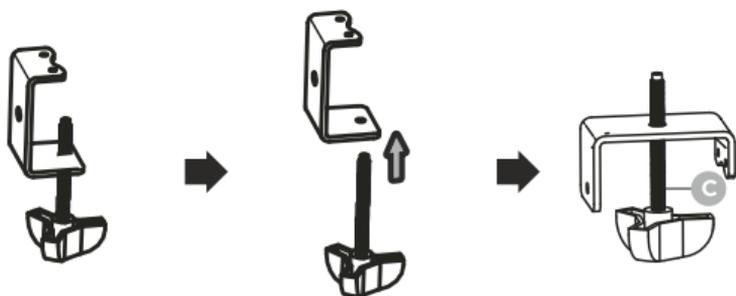


- If your desktop has an existing grommet hole between 10.16mm - 50mm in diameter, with desk thickness of 10.16mm - 40.64mm then it is ready for installation.
- If no grommet hole exists in the desktop or not in the required location, then one will need to be drilled. use a 10mm drill bit to drill a hole through your desktop. The desk must be between 10.16mm - 40.64mm thick.

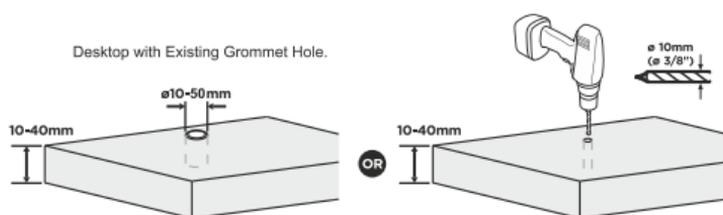


- Place the pole over the grommet hole and install the grommet handle through the underside of the desk then tighten the handle until the mount is secure.

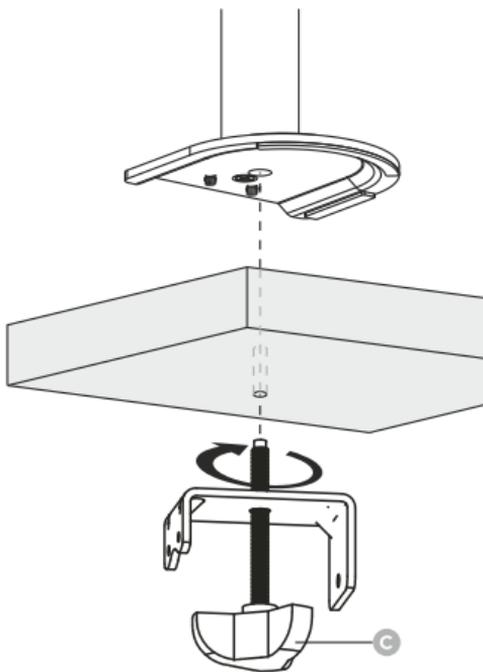


3. Attach VESA Mounts to the Arms of the stand :

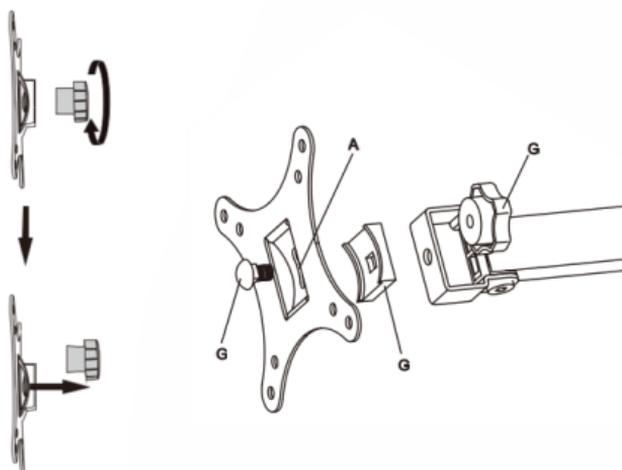

4. Attach the VESA Plate to the monitor :

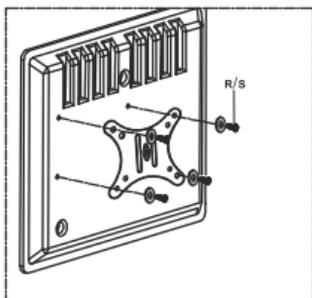

For Monitor with Flat Back

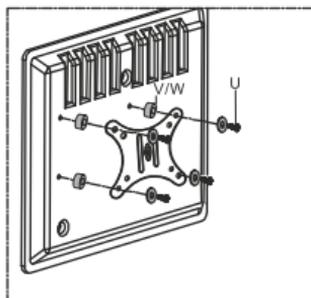


For Monitor with Dent Back

Note :


The VESA Installation shown in the picture (without the arm) is for demonstration purposes only.

During actual installation, ensure the complete arm and main body are fully assembled (i.e Step 3) and attach the VESA mount to the monitor.

5. Make the Necessary Adjustments :

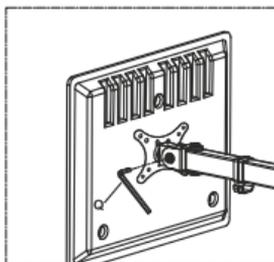

Adjust and tighten the bolt with the supplied Allen Key (Q) to fix the tilt angle

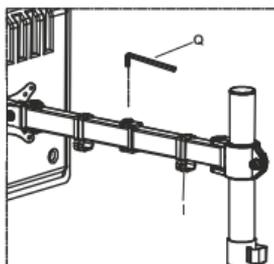

If one monitor is lower, remove the Nut and turn the bolt counter-clockwise with supplied Allen key (Q) to raise the monitor. Install the Nut after the adjustment.

Note:

Never swivel forward or backward too much, accidental falling might occur.

6. Manage the Wires and store the Allen keys on wire Clip:

