



Wireless Neckband Earphone

ZEB **ESCAPE 30**



User Manual

www.zebronics.com

Thank You for purchasing **ZEB-ESCAPE 30** wireless neckband earphone. Please read this user manual carefully before operation & save it for future reference.

Note:

- *Please full charge the product with a power adapter output rated DC 5V before first time usage.*
- *Avoid the self-disassembly the product or it results in the voiding the product's warranty.*

To know more about Terms and conditions for warranty policy, please visit

<https://zebronics.com/pages/warranty-policy>

Caution:

Listening at high volume can cause hearing impairment. Please limit your usage time at high volume.

Features

Wireless BT earphone with Neckband

Volume/Media Control

Magnetic Earpiece

Call Function

Voice Assistant support

Built-In Rechargeable Battery

Specifications


BT Version	: v5.3
BT Profile	: HSP / HFP / A2DP / AVRCP
Drive size	: 10mm
Speaker impedance	: 16Ω
Playback time	: 25 h*
Charging time	: 1.5 h
Talk time	: 25 h*
Standby time	: 300 h
Net. weight	: 30g

Package contents

Neckband	: 1 U
Charging Cable	: 1 U
QR Code Guide	: 1 U

** at 50% volume*

Product Representation

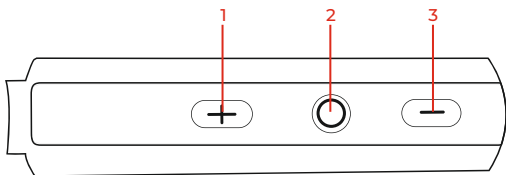

1. + Button

Short press: Volume up

Long press: Next track

2. MFB Button

Single press: Play / Pause

Press and hold for 3 seconds: Voice assistant

Long press and hold: Power On/ Power off

When calling (MFB Button on Middle):-

Single press: Accept / End the ongoing call

Double press: Direct incoming Call rejection

Double press: Redial

3. - Button

Short press: Volume down

Long press: Previous track

Usage Instruction

Bluetooth Pairing Instructions:

STEP 1 - Press and hold the MFB button to power ON the earphones.

STEP 2 - Switch ON the BT in your mobile phone & search for the BT name **“ZEB-ESCAPE 30”**

STEP 3 – Once the BT name is visible in your mobile phone, tap to connect it.

Activating Smart Phone's Voice Assistant

When the neckband is connected to a mobile phone, Press and hold the B u t t o n for 3 seconds to activate voice assistant.

Note: Smart phone should have an active internet connection to use the voice assistant function.

Call Function:

- Single press the **MFB** button to attend / end the Call and Double press to reject the incoming call.
- Double press the **MFB** button for Redialing.

Led Indication

1	Charging the Neckband	Red light glows-(charging) Blue Light Glows - Fully charged
2	BT pairing	Red and blue blinks – BT discovery mode Blue blinking - BT paired successfully
3	Power on / off	Blue Blinking – while power On Red Blinking – while power Off

Charging Instruction

Connect the Type-C charging cable to the charging port of the Neckband & connect the other end to the DC 5V adapter.

