



**User Manual** 

www.zebronics.com

Dear Customer,

Thank you for purchasing **ZEB-ICONIC SMART** Watch. Please read this user manual carefully before operation & save this user manual for further reference

#### Disclaimer

- This product should not be used for medical purpose, though it may monitor the BP, Sp02, Heart rate.
  - Use 5VDC 2A adapters only.
- Kindly approach Zebronics service centers for service or warranty. Please refer to the following link for service center details:

https://zebronics.com/pages/warranty-policy

#### **Features**

Heart Rate, SpO2 & BP monitor
Steps / Calories / Distance
Sleep Monitor
Large Vibrant Colour Display
7 Built in Watch Faces
Call, SMS and Third Party app message
notification
Wrist Sense
100+ Static Sport Modes
Weather Forecast
Brightness Adjustment
Ip67

Raise to Wake

Call Function (via BT)

Supports Voice Assistant

2.5D Laminated Glass

Always On Display

Calculator

Menstrual Tracking

Camera & Music Control

Dual Menu UI

7 Days Data Storage

Meditative Breathing

**Functional Crown** 

Unisex

DND Mode

Find Device

2 Inbuilt Games

### **Specification**

Support : iOS 9 & Above /

Android 5.0 & Above\*

Vibration : Yes Water Resistant : Ip67

Screen Size & Type: 4.5cm (1.78)

**AMOLED Display** 

Bluetooth : v5.0 + v3.0

Control : Capacitive Touch

Screen, One button

on Right side

Data Storage : 7 Days

Battery : 220mAh, Built-in

rechargeable

Standby Time : 25 days : 2 h Charge Time

Strap : Silicone

Product Dimension

Core (W x D x H)  $: 3.8 \times 4.3 \times 1.2 \text{ cm}$ 

Strap (L x B)

Long strap : 13.2 x 2.2 cm

Short strap : 9.2 x 2.2 cm

Net Weight : 40g

### **Package Contents**

Smart Watch :1U Charging Cable :1 U QR Code Guide : 1 U



## **Charging process**

Use a 5V DC power adapter / charger to charge the **ICONIC SMART** (ZEB-FIT i8) smart watch with the charging cable provided inside the package. Kindly ensure to charge the device fully before using it for the first time. The fitness watch powers ON once plugged to the charger or it can be manually powered ON by pressing the button for few seconds.

#### **Usage instructions:**


## 1. Installing ZEB-FIT 20 SERIES app:

Download the app by scanning the QR code or search for the name ZEB-FIT 20 SERIES in the play store / app store. Once installed, follow the steps directed by the app interface. **Note:** Your device must support Android 5.0 / iOS 9.0 (or

**Note:** Your device must support Android 5.0 / iOS 9.0 (or above)

## 2. Connecting ICONIC SMART (ZEB-FIT i8) smart watch to the app:


Click on 'Add device' option in the ZEB-FIT 20 SERIES app home page.

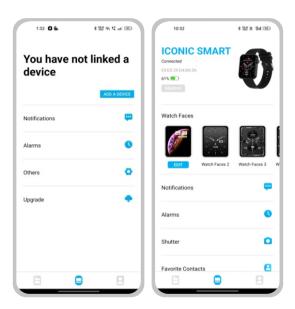

Select the device name **ICONIC SMART** from the scanned name list.

While pairing, iOS devices display a BT pairing requested which must be given 'Pair' to confirm and proceed. Android devices get connected directly.

Connection successful.

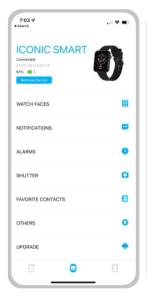



# 3. Call function (via BT) – connection and usage:

Enable the secondary BT from the watch settings BT: OFF > BT: ON

Now open your smart phone's BT menu and scan for nearby devices.

Connect to the device name **ICONIC SMART** (these steps apply for both Android and iOS smart phones)

Once connected, you can now use the watch dialler option and voice call function (via BT)







## 4. Display and interface of ICONIC SMART smart watch:

Once the device is powered ON and connected to the smart phone, the following are the display interface images which can be seen in **ICONIC SMART** smart watch.





## 5. Disconnecting process:

For Android based smart phones, the fitness watch can be disconnected directly from the **ZEB-FIT 20 SERIES** app interface by simply clicking on the option as shown in the below image.

For iOS devices, once the above step is done, kindly ensure the fitness watch name is disconnected from the BT menu of the iOS device, as shown below.









**Note:** Do not use the fitness watch in the water with temperatures above 42°c. For any repairs please take the fitness watch to the authorised service center.

https://zebronics.com/pages/service-centres

ISO 9001:2015 Certified Company www.zebronics.com